



Product Bulletin

SPRING REPLACEMENT: Shaver HD-8, HD-10, HD-12H

IMPORTANT: Once installed, run driving ram up and down 10 to 15 times **without** impact to season your springs. Do this **EACH** time you start a new day!

Spring Replacement, Shaver HD-8 and HD-10:

- Follow the disassembly instructions for the Post Driver until the spring assembly is out of the driving ram.
- Bend the spring clips back to their original shape as shown on the parts list.
- Insert a screwdriver through the loop and twist the spring clips out.
- Force the screwdriver through the first coil of the new spring and the loop of the spring clip into the spring.
- Insert the screwdriver into the clip, twisting it into the replacement spring at least two coils down.
- Bend the ends of the clip back to secure the placement.

Spring Replacement, Shaver HD-12H:

PLEASE NOTE: On **Shaver HD-12H** Post Drivers, spring replacement can be done without removing the cylinder.

- Remove the ½" hexnut and lockwasher from the **bottom** of both springs.
!!!CAUTION!!! Springs are under tension when fastened!
- Move the main carriage channel down to where the top of it is slightly past the top of the beam of the driving ram.
- Remove the ½" hexnut and lockwasher for the **top** of both springs.
- Remove both springs from the bottom of the driving ram.
- Reassemble the Post Driver by reversing these steps.

IMPORTANT: Once installed, run driving ram up and down 10 to 15 times **without** impact to season your springs. Do this **EACH** time you start a new day!