
COMPACT GRAPPLE BUCKET

MODELS GBC-60, GBC-66 & GBC-72

& BRUSH FORK

MODELS BF-60, BF-66 & BF-72

SERVICE & PARTS MANUAL

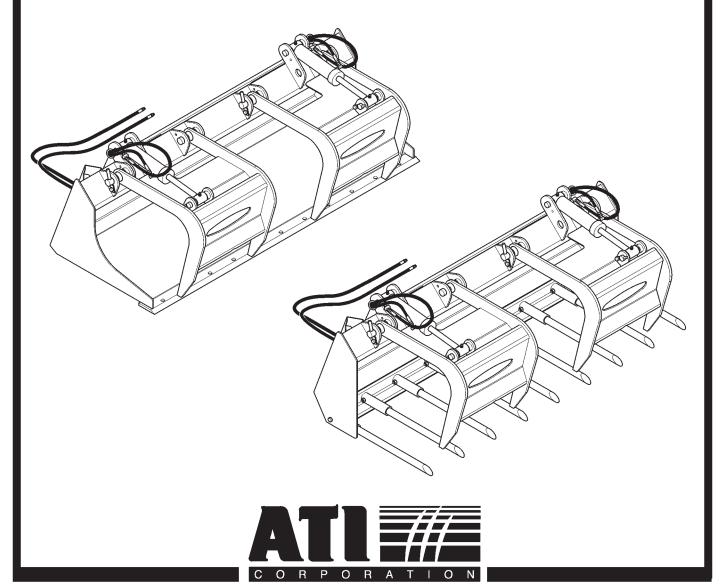

New Holland, PA 17557 Phone (717) 354-8721 • FAX (717) 354-2162 1-800-342-0905

www.preseeder.com

JULY 2005
CAT.#GBC/BF606672IPM-0705

COPYRIGHT 2005 by **ATI Corporation**New Holland, PA 17557 U.S.A.

DISCLAIMER

THE INFORMATION IN THIS MANUAL IS PROVIDED TO PROMOTE THE SAFE USE OF, AND ASSIST THE OPERATOR IN ACHIEVING THE BEST PERFORMANCE FROM, COMPACT GRAPPLE BUCKET & BRUSH FORK DESCRIBED HEREIN, FOR THEIR INTENDED APPLICATIONS.



NOTES



TABLE OF CONTENTS

SUBJECT	PAGE NO.
SERIAL NUMBER INFORMATION	iv
WHERE TO GET PARTS AND SERVICE	iv
HOW TO ORDER PARTS	
SAFETY, INSTALLATION & MAINTENANCE	
LIST OF PARTS ILLUSTRATIONS	1



Compact Grapple Bucket & Brush Fork & Brush Fork

SERIAL NUMBERS, PARTS & SERVICE

SERIAL NUMBER INFORMATION

It is very important that the correct serial number is provided when ordering parts. The serial number plate is located on the back left corner of the bucket or fork. Please mark the model and serial number of your attachment in the space provided below in case the plate on your attachment gets lost or damaged.

Model	Serial Number	• • • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • •
Dealer Name	Dealer Phone N	umber	• • • • • • • • • •	

WHERE TO GET PARTS AND SERVICE

When replacement parts and service are required for your attachment, ATI Corporation recommends returning to the <u>dealer</u> from which the attachment was purchased. By going to the dealer, you are dealing with people that understand and know your attachment. Our dealers have the experience servicing these machines and stock the most common parts required to keep your attachment in top working condition.

NOTE:

ATI Corporation reserves the right to discontinue models at any time, change specifications, and improve design without notice and without incurring obligation on goods previously purchased and to discontinue supplying any part listed, when the demand does not warrant production.



HOW TO ORDER PARTS

Parts lists contained in this book have been prepared to help you when ordering spare and/or replacement parts. Your order will be filled promptly and accurately when the following information is provided to your dealer:

- 1. Model and serial number of the unit. (This specifically identifies the equipment you have and permits us to verify the part numbers in your order.)
- 2. The parts list page number and catalog number. Include catalog revision number, if applicable.
- 3. The **Item** number for each part. **Item** numbers on the parts list page correspond with the numbers shown on the illustration.
- 4. **Part Number** as it appears in the parts list. In most cases this will be a nine-digit number; for example: 200-147-000.
- 5. The **Description** for the part as it appears on the parts list page.

When a complete assembly is needed, use the assembly number given in the parts list. If no assembly number is given, order by main assembly title and list only the item numbers you want. For example: "Cylinder Assembly, Right hand 2" Bore x 6" Stroke per 000-166-142, Items 2 through 15 inclusive".

The part ordered may have a new part number, or the part may have been replaced by a newer design with a different part number. In these cases your acknowledgement, shipping papers and invoices will be written listing the current part number first; the old part number you referred to will follow the part description.

Our purpose in doing this is to tell you that the parts are fully interchangeable. This will avoid any unnecessary correspondence or delay in processing your order. We suggest that you add any new number to your parts lists for future use.



New Holland, PA 17557 Phone (717) 354-8721 • FAX (717) 354-2162 1-800-342-0905 www.preseeder.com

SAFETY, INSTALLATION & MAINTENANCE

SAFETY

<u>SAFETY</u> is our first concern at ATI Corporation. Safety must also be first in the mind of the operator of the grapple bucket/brush fork. Proper maintenance is necessary to complete the safety cycle.

Observe all safety rules, including:

- Operate at a safe distance from bystanders.
- Never perform maintenance or service work such as lubricating, inspecting, clearing debris, etc., while the tractor engine is running. Shut off the engine and remove the key before performing these functions.

A CAUTION

DO <u>NOT</u> EXCEED THE LOADER'S SAE OPERATING LOAD. See the

operator's manual of the loader for load specifications. Remember to include the weight of the grapple bucket or brush fork in the total weight to be lifted by the loader.

WEIGHT CHART					
GRAPPLE	BUCKETS	BRUSH	I FORKS		
MODEL WEIGHT		MODEL	WEIGHT		
GBC-60	480	BF-60	530		
GBC-66	505	BF-66	565		
GBC-72	530	BF-72	590		

PRESSURIZED OIL LEAKS CAN PENETRATE YOUR SKIN. Before investigating or repairing leaks, shut off the tractor engine and move the hydraulic control valve to open and close positions several times, to relieve pressure in the hydraulic lines.

INSTALLATION

Please refer to loader operator's manual for attachment installation instructions.

MAINTENANCE

- Lubricate all grease fittings every ten (10) hours of operation.
- Check all hydraulic hoses frequently for leaks or damage.
- Replace defective hoses before operating the grapple.
- Check all pivot pins and fasteners; replace them as needed.
- Remember that well-maintained equipment is safer, will perform better, and provide longer service life!



LIST OF PARTS ILLUSTRATIONS

Figure 1. Bucket, Grapple Hooks & Related Parts	2
Elever 2 David Early Cyangle Healts & Delated David	/
Figure 2. Brush Fork, Grapple Hooks & Related Parts	4
Figure 3. Hydraulics	6
Figure 4. Cylinder Assembly	3



New Holland, PA 17557 Phone (717) 354-8721 • FAX (717) 354-2162 1-800-342-0905 www.preseeder.com

Compact Grapple Bucket & Brush Fork PARTS LIST

Figure 1. Bucket, Grapple Hooks & Related Parts

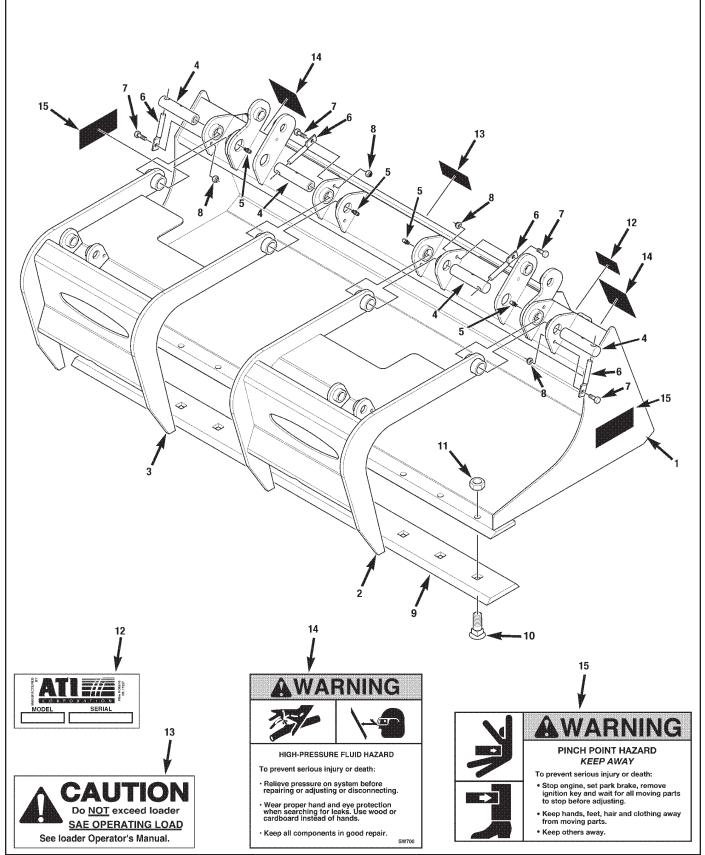




Figure 1. Bucket, Grapple Hooks & Related Parts

New Holland, PA 17557 Phone (717) 354-8721 • FAX (717) 354-2162 1-800-342-0905 www.preseeder.com

Item	Part No.	Qty	Description
1	300-116-000	1	Bucket Weldment, 60"
	300-117-000	1	Bucket Weldment, 66"
	300-118-000	1	Bucket Weldment, 72"
2	300-119-000	1	Hook, Grapple, Left Hand
3	300-120-000	1	Hook, Grapple, Right Hand
4	000-161-048	4	Pin, Grapple Hook, 1-1/4" Dia. x 5-1/4" Long
5	LP	4	Fitting, Lube, 1/4"-28UNF
6	000-161-024	4	Pin, Retainer, 3/8" Dia. x 3-1/4" Long
7	LP	3	Bolt, Hex Head, 5/16"-18UNC x 1" Long
8	LP	3	Nut, Hex, Nylon Lock, 5/16"-18UNC
9	000-190-105	1	Edge, Cutting, DBF, 61-3/8", Optional (60" Bucket), Includes Items 10 & 11
	000-190-106	1	Edge, Cutting, DBF, 67-3/8", Optional (66" Bucket), Includes Items 10 & 11
	000-190-107	1	Edge, Cutting, DBF, 73-3/8", Optional (72" Bucket), Includes Items 10 & 11
10	000-150-254	AR	Bolt, Plow, Grade 8, 5/8"-11UNC x 1-1/2" Long
11	000-158-139	AR	Nut, Hex, Lock, Grade 8, 5/8"-11UNC
12	000-186-035	1	Plate, Serial, Adhesive Back
13	000-186-023	1	Decal, Caution
14	000-186-041	2	Decal, Warning, High-Pressure Fluid Hazard
15	000-186-057	2	Decal, Warning (Pinch Point)
AR -	As Required NSS - N	 Not Serviced	Separately ASN - After Serial No. BSN - Before Serial No. LP - Local Purchase



Figure 2. Brush Fork, Grapple Hooks & Related Parts

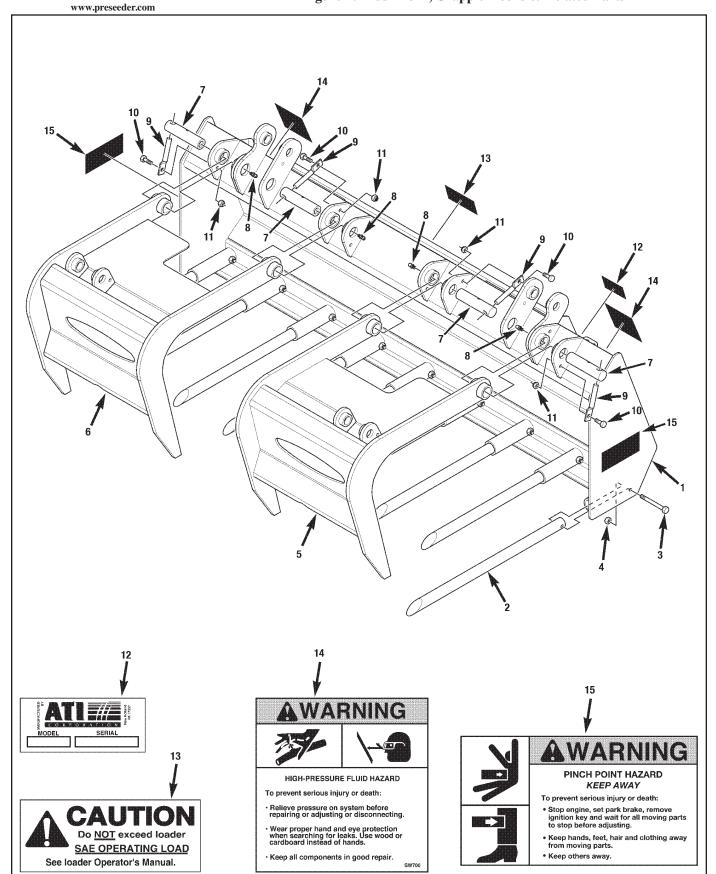




Figure 2. Brush Fork, Grapple Hooks & Related Parts

New Holland, PA 17557
Phone (717) 354-8721 • FAX (717) 354-2162
1-800-342-0905
www.preseeder.com

			www.preseeder.com
Item	Part No.	Qty	Description
		- •	
1	300-013-100	1	Frame, Brush Fork, 60"
1	300-014-100	1	Frame, Brush Fork, 66"
	300-015-100	1	Frame, Brush Fork, 72"
2	000-205-036	AR	Tine, Brush Fork
2 3	LP	AR	Bolt, Hex Head, 3/8"-16UNC x 2-1/2" Long (Shown Outside)
	LP	AR	Bolt, Hex Head, 3/8"-16UNC x 2-1/4" Long (Not Shown Inside)
4	LP	AR	Nut, Hex, Nylon Lock, 3/8"-16UNC
5	300-119-000	1	Hook, Grapple, Left Hand
6	300-120-000	1	Hook, Grapple, Right Hand
7	000-161-048	4	Pin, Grapple Hook, 1-1/4" Dia. x 5-1/4" Long
8	LP	4	Fitting, Lube, 1/4"-28UNF
9	000-161-024	4	Pin, Retainer, 3/8" Dia. x 3-1/4" Long
10	LP	3	Bolt, Hex Head, 5/16"-18UNC x 1" Long
11	LP	3	Nut, Hex, Nylon Lock, 5/16"-18UNC
12	000-186-035	1	Plate, Serial, Adhesive Back
13	000-186-023	1	Decal, Caution
14	000-186-041	2	Decal, Warning, High-Pressure Fluid Hazard
15	000-186-057	2	Decal, Warning (Pinch Point)
AR -	As Required NSS - N	 Not Serviced	 Separately ASN - After Serial No. BSN - Before Serial No. LP - Local Purchase
	•		



New Holland, PA 17557 Phone (717) 354-8721 • FAX (717) 354-2162 1-800-342-0905 www.preseeder.com

Figure 3. Hydraulics

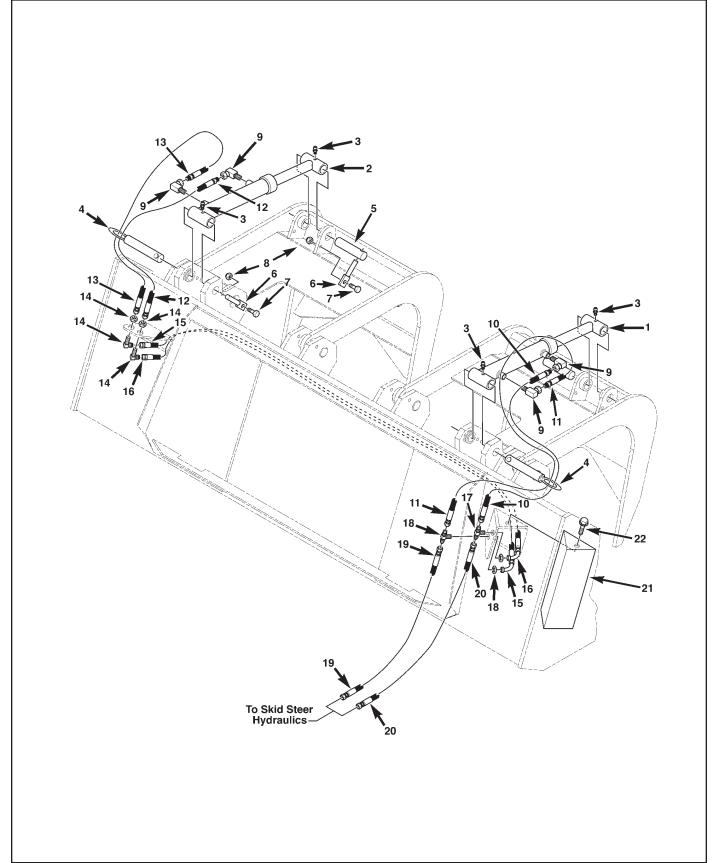




Figure 3. Hydraulics

New Holland, PA 17557 Phone (717) 354-8721 • FAX (717) 354-2162 1-800-342-0905 www.preseeder.com


			www.preseeder.com
Item	Part No.	Qty	Description
1	000-166-142	1	Cylinder Assembly, Right Hand, 2" Bore x 6" Stroke (See Breakdown)
2	000-166-093	1	Cylinder Assembly, Left Hand, 2" Bore x 6" Stroke (See Breakdown)
3	LP	4	Fitting, Lube, 3/16" Drive
4	000-161-049	2	Pin, Cylinder, 1" Dia. x 5-1/2" Long, With Ring
5	000-161-052	2	Pin, Cylinder, 1" Dia. x 5-1/2" Long Pin, Cylinder, 1" Dia. x 5-1/2" Long
6	000-161-032	4	Pin, Retainer, 3/8" Dia. x 3-1/4" Long
7	LP	4	Bolt, Hex Head, 5/16"-18UNC x 1" Long
8	LP	4	Nut, Hex, Nylon Lock, 5/16"-18UNC
9	000-166-048	4	Elbow, 4MJ x 4MB, 90°
10	000-100-048	1	Hose, Hydraulic, 1/4" x 6FJX x 4FJX x 30" Long
11	000-166-123	1	Hose, Hydraulic, 1/4" x 6FJX x 4FJX x 30" Long Hose, Hydraulic, 1/4" x 6FJX x 4FJX x 16" Long
12	000-166-120		Hose, Hydraulic, 1/4" x 4FJX x 4FJX x 16" Long
13	000-166-121	1	·
1	000-166-121	1	Hose, Hydraulic, 1/4" x 4FJX x 4FJX x 30" Long Elbow, Bulkhead Union, 4MJ x 4BH90, With Locknut
14		2	
15	000-166-165	1	Hose, Hydraulic, 1/4" x 6FJX90 x 4FJX x 54" Long, (GBC-60)
	000-166-122	1	Hose, Hydraulic, 1/4" x 6FJX90 x 4FJX x 60" Long, (BF-60, BF-66 & GBC-66)
16	000-166-122	1	Hose, Hydraulic, 1/4" x 6FJX90 x 4FJX x 60" Long, (BF-72 & GBC-72)
16	000-166-165	1	Hose, Hydraulic, 1/4" x 6FJX90 x 4FJX x 54" Long, (GBC-60)
	000-166-122	1	Hose, Hydraulic, 1/4" x 6FJX90 x 4FJX x 60" Long, (BF-60, BF-66 & GBC-66)
17	000-166-122	1	Hose, Hydraulic, 1/4" x 6FJX90 x 4FJX x 60" Long, (BF-72 & GBC-72)
17	000-166-102	1	Tee, Bulkhead Branch, 6MJ x 6MJ x 6BH, With Locknut
18	000-166-130	1	Tee, Bulkhead Branch, 6MJ x 6MJ x 6BH, Orifice in Run, With Locknut
19	000-166-116	1	Hose, Hydraulic, 1/4" x 8MB x 6FJX x 65" Long
20	000-166-116	1	Hose, Hydraulic, 1/4" x 8MB x 6FJX x 65" Long
21	300-126-000	1	Shield, Hose
22	LP	1	Capscrew, Hex Head, Serrated Flange, 5/16"-18UNC x 3/4" Long
			BH-Bulkhead
			MP-Male Pipe
			FP-Female Pipe
			FPX-Female Pipe Swivel
			MB-Male O-Ring Boss
			FB-Female O-Ring Boss
			MJ-Male JIC
			FJ-Female JIC
			FJX-Female JIC Swivel
AR -	As Required NSS - N	Not Serviced	Separately ASN - After Serial No. BSN - Before Serial No. LP - Local Purchase



www.preseeder.com

Compact Grapple Bucket & Brush Fork PARTS LIST

Figure 4. Cylinder Assembly

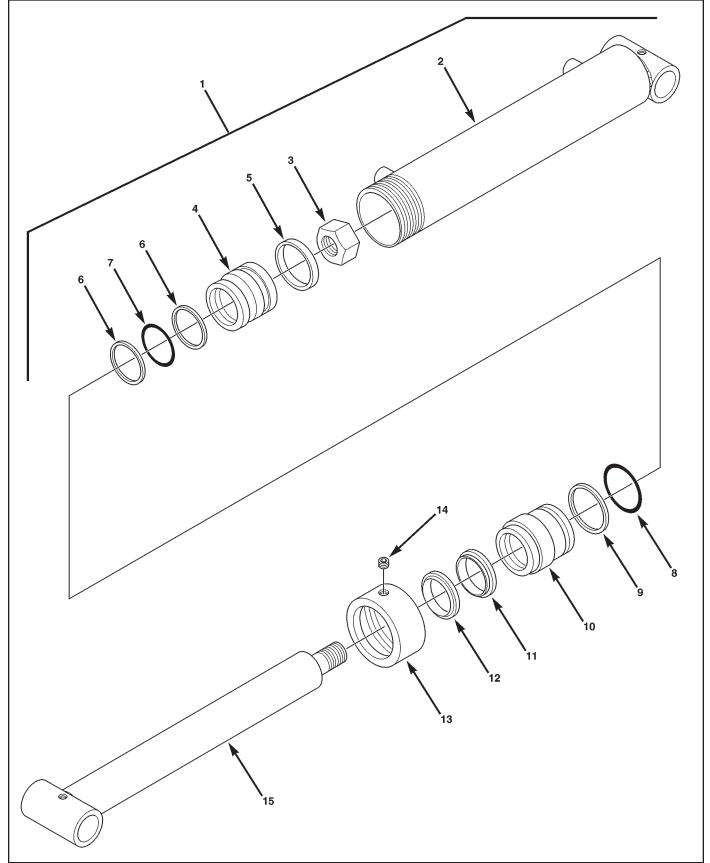



New Holland, PA 17557 Phone (717) 354-8721 • FAX (717) 354-2162 1-800-342-0905 www.preseeder.com

Figure 4. Cylinder Assembly

Item	Part No.	Qty	Description
1	000-166-142	1	Cylinder Assembly, Right Hand, 2" Bore x 6" Stroke
	000-166-093	1	Cylinder Assembly, Left Hand, 2" Bore x 6" Stroke
			Includes Items 2 thru 15
2	000-166-311	1	Barrel Assembly, Right Hand
	000-166-312	1	Barrel Assembly, Left Hand
3	LP	1	Nut, Lock, 1/2"-20UNF
4	000-166-313	1	Piston
5	NSS	1	Uniring
6	NSS	2	Ring, Back Up
7	NSS	1	O-Ring
8	NSS	1	O-Ring
9	NSS	1	Ring, Back Up
10	000-166-314	1	Head, Cap, Threaded
11	NSS	1	U-Cup, Loaded
12	NSS	1	Wiper, Rod
13	000-166-315	1	Cap, Threaded
14	LP	1	Screw, Set, 1/4"-20UNC x 1/4" Long
15	000-166-316	1	Rod Assembly
	000-166-317	AR	Kit, Cylinder Repair Includes: Items 5 thru 9, 11 & 12
AR -	As Required NSS - I	 Not Serviced S	Separately ASN - After Serial No. BSN - Before Serial No. LP - Local Purchase