
PM 594

7718 6-15-99

7549

BRADCO. 509 & 511 POWER BACKHOES

EXCAVATOR STYLE CONTROL PATTERN

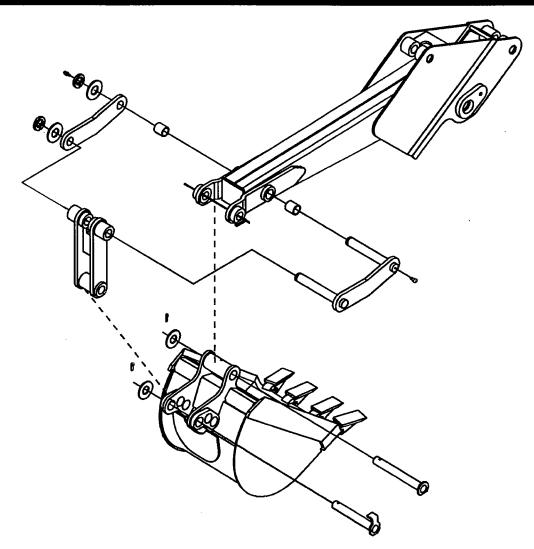

PARTS MANUAL

BRADCO ®

P.O. Box 266 · Delhi, Iowa 52223 USA (319) 922-2981 · (800) 922-2981 Fax 319-922-2130

A Division of ATI GLOBAL, INC.



LIMITED WARRANTY

EFFECTIVE MARCH 1, 1986

All new Bradco products are warranted by ATI Incorporated (formerly American Trencher Inc.) to be free from defects in materials or workmanship which may cause failure under normal usage and service when used for the purpose intended.

In the event of failure within twelve (12) months from initial retail sale, lease or rental date (excluding cable, ground engaging parts such as sprockets, digging chain, bearings, teeth, tamping and demolition heads, and blade cutting edges), if after examination, ATI determines failure was due to defective material and/or workmanship, parts will be repaired or replaced by ATI Incorporated. ATI may request defective part or parts be returned prepaid to them for inspection at their place of business at Delhi, lowa, or to a location specified by ATI.

Any claims under this warranty must be made within fifteen (15) days after the Buyer learns of the facts upon which such claim is based. All claims not made in writing and received by ATI within the time period specified above shall be deemed waived.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EX-PRESSED OR IMPLIED AND THERE ARE NO WARRANTIES OF MERCHANT-ABILITY OR OF FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL ATI BE LIABLE FOR CONSEQUENTIAL OR SPECIAL DAMAGE.

ATI'S LIABILITY FOR ANY AND ALL LOSSES AND DAMAGES TO BUYER, RESULTING FROM ANY CAUSE WHATSOEVER, INCLUDING ATI'S NEGLIGENCE, IRRESPECTIVE OF WHETHER SUCH DEFECTS ARE DISCOVERABLE OR LATENT, SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE PARTICULAR PRODUCTS WITH RESPECT TO WHICH LOSSES OR DAMAGES ARE CLAIMED, OR, AT THE ELECTION OF ATI, THE REPAIR OR REPLACEMENT OF DEFECTIVE OR DAMAGED PRODUCTS.




-TABLE OF CONTENTS -

SERVICE PARTS - EXCAVATOR CONTROLS

MAINFRAME ASSEMBLY #87446 Mainframe Swing Post Swing Cylinder Stabilizers Hose Bundle Clamps
509 BOOM & DIPPER ASSEMBLY
CONSOLE ASSEMBLY#87442
VALVE ASSEMBLY#2241
CYLINDERS #81827 SWING CYLINDER #86605 STABILIZER CYLINDER #86231 509 BOOM CYLINDER #82625 509 DIPPER CYLINDER #86236 511 DIPPER CYLINDER #87029 BUCKET CYLINDER #82477
HOSE SETS MAINFRAME HOSE SET #83434 509 BOOM & DIPPER HOSE SET #85448 511 BOOM & DIPPER HOSE SET #86982
STABILIZER PAD OPTIONS FLAT STABILIZER PAD ASSEMBLY #81861 GROUSER STABILIZER PAD ASSEMBLY #81860 LARGE GROUSER STABILIZER PAD ASSEMBLY #81862 RUBBER STABILIZER PAD ASSEMBLY #83058
OPTIONAL STABILIZER CYLINDER COVER #86550
BUCKET OPTIONS 12" BUCKET #85012 16" BUCKET #85016 18" BUCKET #85019 20" BUCKET #85020 24" BUCKET #85024
509 FIRST LINE REPAIR KIT #86320 511 FIRST LINE REPAIR KIT #87500
509 DECAL SET#40392 511 DECAL SET#40393

MAINFRAME ASSEMBLY

ASSEMBLY #87446 MAINFRAME

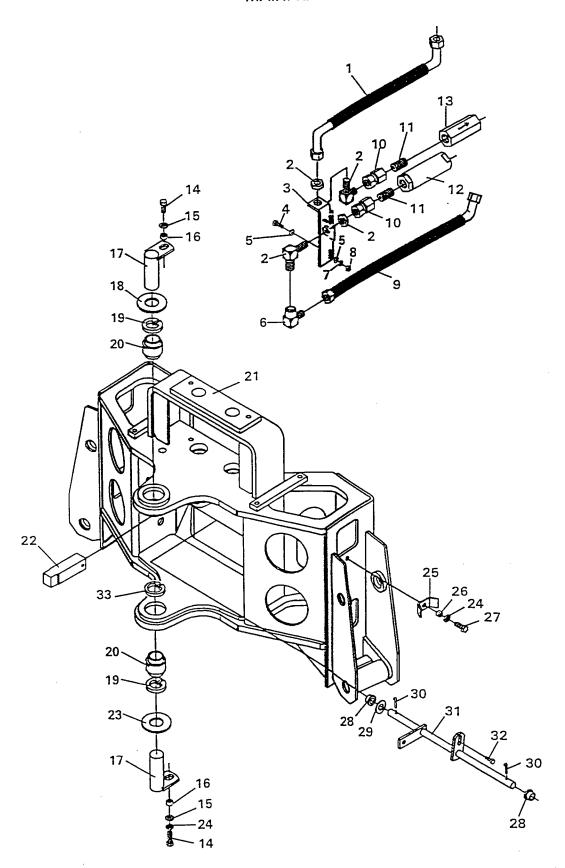


- MAINFRAME ASSEMBLY----

ASSEMBLY #87446 MAINFRAME

NO	REQ'D	PART NO.	DESCRIPTION
1.	1	37554	Hose .50" X 36" 8FJX 90° Short Gooseneck - 8FJX 90° Short Gooseneck
2	2	3382	90° Bulkhead Elbow (Includes Nut)
3	1	85540	Hose Mounting Bracket
4	2	1004	.25" UNC X 1.25" Hex Capscrew
5	4	1512	.25" Flat Washer
6	1	3149	90° Elbow 8FJX-8MJ
7	2	1501	.25" Lock Washer
8	2	1224	.25" UNC Hex Nut
9	1	37690	Hose .50" X 41" 45° Gooseneck 8FJX-8FJX
10	2	3273	Coupling 8FP-8FJX
11	2	3211	Close Nipple .50" NPT
12	1	45132	Inline Filter
13	1	45691	Check Valve
14	2	1043	.38" UNC X 1.00" Hex Capscrew
15	2	1514	.38" Flat Washer
16	2	81807	Spacer Tube
17	2	81592	Pin Grease Zerk
10	2	6616	Thrust Washer 1.38" X .125"
18	1	83977 1929	Snap Ring
19 20	2 2	6615	Bearing
20	2	0013	200.11.19
21	1	86195	Mainframe (Includes (4) 83815 Bushings - Installed with Locktite Grade 680)
22	1	82090	Swing Lock Pin
23	As Req'd	83975	Thrust Washer 1.38" X .031"
	As Req'd	83976	Thrust Washer 1.38" X .093"
	As Req'd	83977	Thrust Washer 1.38" X .125"
24	3	1503	.38" Lock Washer
25	2	6186	Hose Clamp
26	2	6799	Spacer Tube
27	2	1044	.38" UNC X 1.25" Hex Capscrew
28	2	82794	Bushing
29	As Req'd	1528	.62" SAE Flat Washer
30	2	1611	Cotter Pin
31	1	82796	Linkage
32	1	1982	Shoulder Screw
33	1	1650	Snap Ring
			7683

MAINFRAME ASSEMBLY-

ASSEMBLY #87446 SWING POST

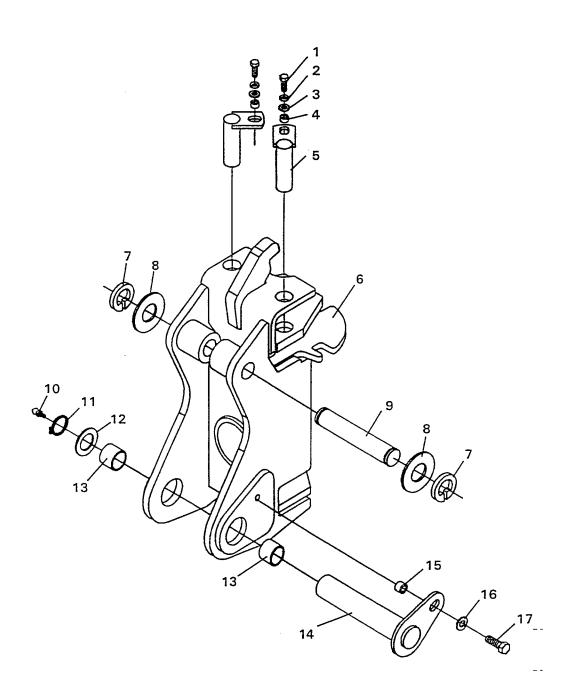

MAINFRAME ASSEMBLY—

ASSEMBLY #87446 SWING POST


<u>NO</u>	REQ'D	PART NO.	DESCRIPTION
1	2	1043	.38" UNC X 1.00" Hex Capscrew
2	2	1503	.38" Lock Washer
3	2	1514	.38" Flat Washer
4	2	81807	Spacer Tube
5	2	81847	Pin
6	1	86201	Swing Post (Includes (2) 82402 Bushings - Installed with Locktite Grade 680)
7	2	1650	Snap Ring
8	As Req'd	83975	Thrust Washer 1.38" X
	As Req'd	83976	Thrust Washer 1.38" X
	As Req'd	83977	Thrust Washer 1.38" X
9	1	86220 (1)	Pivot Pin
10	1	6616	Grease Zerk
11	1	1651	Snap Ring
12	2	6622	Thrust Washer
13	-	82402	Bushing (Included in Swing Post Assembly) (Installed with Locktite Grade 680)
14	1	86227	Pivot Pin
15	1	86149	Spacer Tube
16	1	1516	.50" Flat Washer
17	1	1088	.50" UNC X 1.00" Capscrew (Installed with Locktite Grade 680)

NOTE:

(1) Pivot Pin #86220 is sold only in Pin Kit #86317. Kit includes one pin #86220, two thrust washers #6623 and two snap rings #1650.

- MAINFRAME ASSEMBLY-

ASSEMBLY #87446 SWING CYLINDER

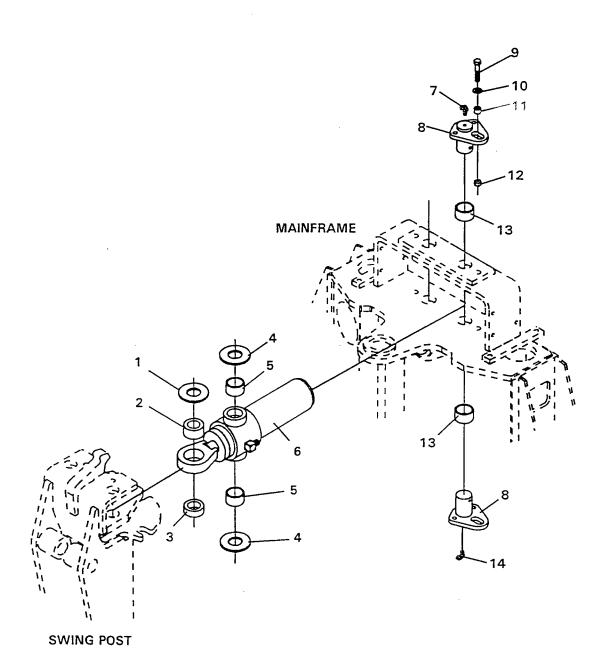


- MAINFRAME ASSEMBLY —

ASSEMBLY #87446 SWING CYLINDER

<u>NO</u>	REQ'D	PART NO.	DESCRIPTION
1	As Reg'd	57693	Thrust Washer 1.25" X .078"
	As Req'd	64727	Thrust Washer 1.25" X .145"
	As Req'd	64728	Thrust Washer 1.25" X .031"
2	-	62523	Self-Aligning Bushing
	-		(Included in Swing Cylinder Assembly)
3	2	81585	Spacer
4	4	68057	Thrust Washer
5	-	82441	Needle Bearing
			(Included in Swing Cylinder Assembly)
6	2	81827	Swing Cylinder Assembly
			(Includes (2) 82441 Needle Bearings and
			(1) 62523 Bushings)
	2	6 616	Grease Zerk
	2	30164	Tee - Special Lateral Tee
7	2	53031	90° Grease Zerk
8	4	82420	Pin
9	4	1047	.38" UNC X 2.00" Hex Capscrew
10	4	1514	.38" Flat Washer
11	4	81595	Spacer Tube
12	4	1837	.38" UNC Deformed Lock Nut
13	-	83815	Bushing (Included in Mainframe - Installed with Locktite Grade 680)
14	2	84688	45° Grease Zerk

MAINFRAME ASSEMBLY-

ASSEMBLY #87446 STABILIZERS

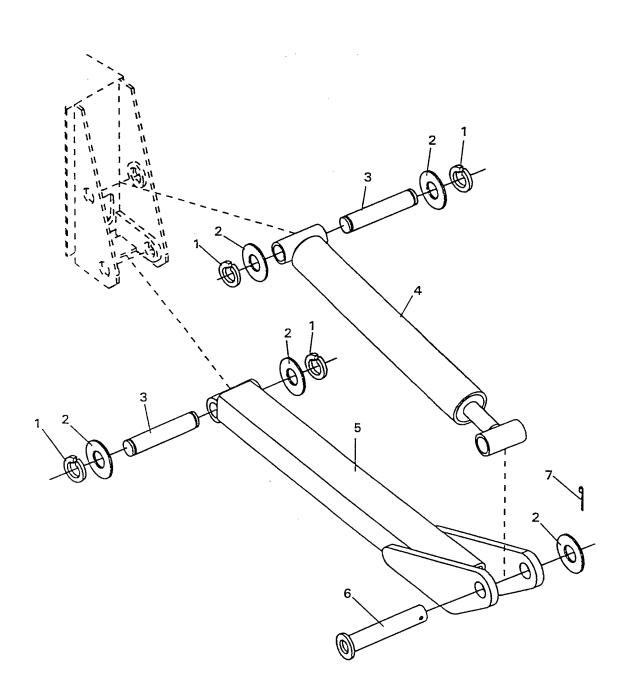

MAINFRAME ASSEMBLY-


ASSEMBLY #87446 STABILIZERS

NO	REQ'D	PART NO.	DESCRIPTION
1	8	1652	Snap Ring
2	As Req'd	57693	Thrust Washer 1.25" X .078"
	As Reg'd	64727	Thrust Washer 1.25" X .145"
	As Req'd	64728	Thrust Washer 1.25" X .031"
3	4	81846 (1)	Pin
4	2	86605 (2)	Stabilizer Cylinder Assembly (1.50" Rod)
	2	83397	Stabilizer Cylinder Assembly (1.25" Rod)
	4	6616	Grease Zerk
5	2	83393	Stabilzer Arm
_	•	02257	Pin
6	2	83257	
7	2	1613	Cotter Pin

NOTE:

- (1) Pivot Pin #81846 is sold only in Pin Kit #86314. Kit includes one pin #81846, two thrust washers #64727 and two snap rings #1652.
- (2) Stabilizer Cylinder Assembly #86605 (1.50" Rod Dia.) replaces Stabilizer Cylinder Assembly #83397 (1.25" Rod Dia.). If ordering replacement parts see Assembly Diagram and Parts list for your existing cylinder. If replacing a complete Stabilizer Cylinder, order Assembly #86605.

-HOSE BUNDLE CLAMPS -

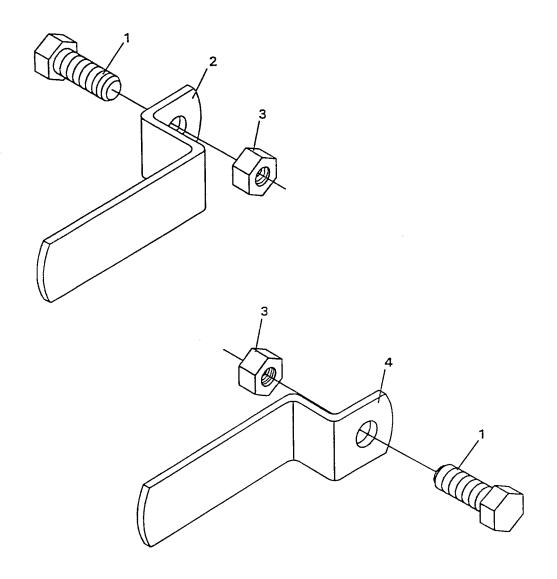

-HOSE BUNDLE CLAMPS----


UP TO SERIAL #---10065

<u>NO</u>	REQ'D	PART NO.	DESCRIPTION
1	2	1043	.38" UNC X 1.00" Hex Capscrew
2	1	84724	Right Hose Bundle Clamp
3	2	1837	.38" UNC Deformed Lock Nut
4	1	84718	Left Hose Bundle Clamp

SERIAL #---10065 AND UP

<u>NO</u>	REQ'D	PART NO.	DESCRIPTION
1	2	1043	.38" UNC X 1.00" Hex Capscrew
2	1	84718	Right Hose Bundle Clamp
3	2	1837	.38" UNC Deformed Lock Nut
4	1	84718	Left Hose Bundle Clamp

509 BOOM & DIPPER ASSEMBLY-

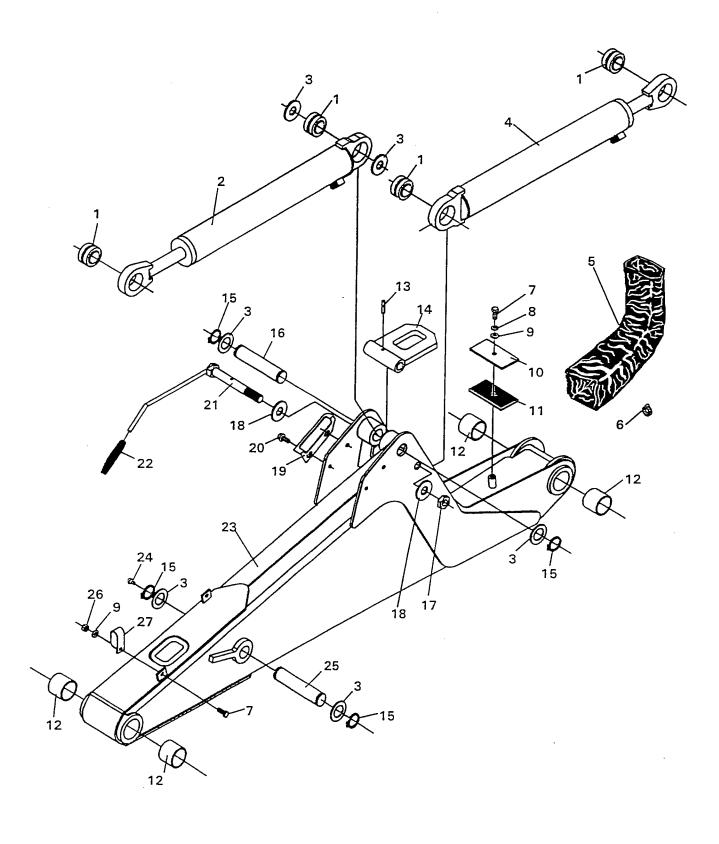

509 BOOM & DIPPER ASSEMBLY—


ASSEMBLY #85440

<u>NO</u>	REQ'D	PART NO.	DESCRIPTION
1	-	6615	Self Aligning Bushing
			(Included in Cylinder Assemblies)
2	1	86236	Dipper Cylinder Assembly
	2	6616	Grease Zerk
3	As Req'd	6623	Thrust Washer 1.38" x .031
	As Req'd	64724	Thrust Washer 1.38" x .090
	As Req'd	64725	Thrust Washer 1.38" x .125
4	1	86231	Boom Cylinder Assembly
	2	6 616	Grease Zerk
5	1	34120	Hose Sock
6	1	53167	Hose Clamp (Included in Console Assembly)
7	3	1043	.38" UNC X 1.00" Hex Capscrew
8	1	1503	.38" Lock Washer
9	3	1514	.38" Flat Washer
10	1	86221	Hose Clamp Plate
11	1	86222	Rubber Spacer
12	-	86673	Bushing (Included in Boom Assembly)
			(Installed with Locktite Grade 680)
13	1	1972	Spring Pin
14	1	86366	Boom Lock
15	4	1650	Snap Ring
16	1	86242 (1)	Pivot Pin
17	1	1959	.88" UNC Jam Nut
18	2	6562	Spring Washer
19	1	84137	Guide Plate
20	2	1953	.38" UNC X .75" Hex FlangeHead Capscrew
21	1	86230	Handle
22	1	83656	Handle Grip
23	1	86151	Boom Assembly (Includes (4) 86673 Bushings)
			(Installed with Locktite Grade 680)
24	1	6616	Grease Zerk
25	1	86224 ⁽²⁾	
26	2	1837	.38" UNC Deformed Lock Nut
27	2	82861	Double Hose Clamp

NOTE:

- (1) Pivot Pin #86242 is sold only in Pin Kit #83615. Kit includes one pin #86242, two thrust washers #6623 and two snap rings #1650.
- (2) Pivot Pin #86224 is sold only in Pin Kit #83619. Kit includes one pin #86224, two thrust washers #6623, two snap rings #1650 and one grease zerk #6616.

509 BOOM & DIPPER ASSEMBLY-

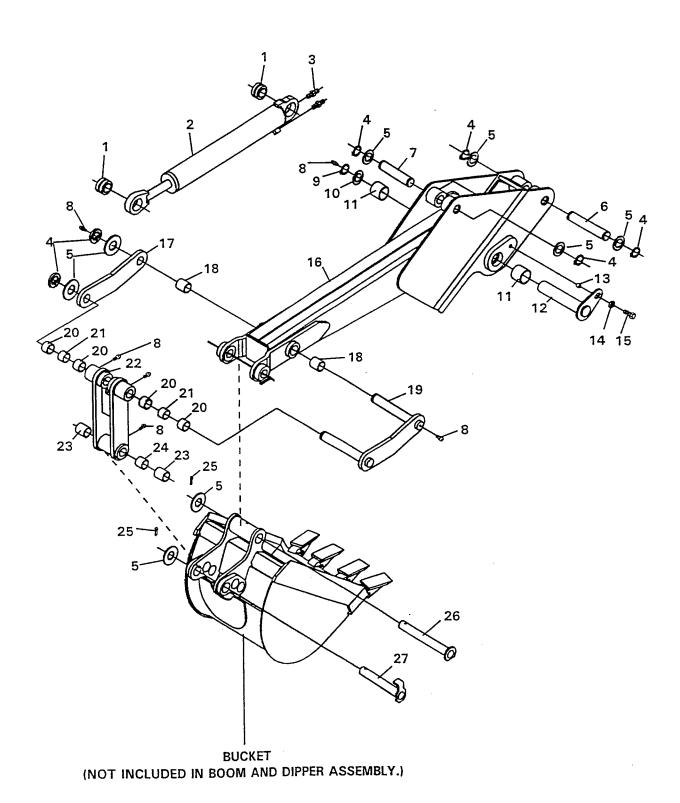

-509 BOOM & DIPPER ASSEMBLY-


ASSEMBLY #85440

NO	REQ'D	PART NO.	DESCRIPTION
1	-	6615	Self-Aligning Bushing (Included in Cylinder Assembly)
2	1	82477	Bucket Cylinder Assembly
	2	6616	Grease Zerk
3	2	3269	Straight Adapter
4	6	1650	Snap Ring
5	As Req'd	6623	Thrust Washer 1.38" X .031
	As Req'd	64724	Thrust Washer 1.38" X .090
	As Req'd	64725	Thrust Washer 1.38" X .125
6	1	86226 (1)	Pivot Pin
7	1	86225 (2)	Pivot Pin
8	6	6616	Grease Zerk
9	1	1651	Snap Ring
10	As Req'd	6622	Thrust Washer 1.75 X .082
11	-	82402	Bushing (Included in Dipper Assembly)
	•		(Install with Locktite Grade 680)
12	1	86227	Pivot Pin
13	1	86149	Spacer Tube
14	1	1516	.50" Flat Washer
15	1	1090	.50" UNC X 1.50" Hex Capscrew
16	1	86164	Dipper Assembly (Includes (2) 82402 and (2) 81610 Bushings) (Installed with Locktite Grade 680)
17	1	84914	Dipper Link Plate
18	-	81610	Bushing (Included in Dipper Assembly) (Install with Locktite Grade 680)
19	1	83428	Dipper Link
20	-	81828	Bushing (Included in Bucket Link UP TO SN#292)
21	-	83369	Spacer Tube (Included in Bucket Link UP TO SN#292)
22	1	82523	Bucket Link (UP TO SN#292 Included (2) 81610 Bushings, (4) 81828 Bushings, (1) 83368 Spacer and (2) 83369 Spacers.)
23	-	81610	Bushing (Included in Bucket Link UP TO SN#292)
24	-	83368	Bushing (Included in Bucket Link UP TO SN#292)
25	2	1613	Cotter Pin
26	1	82580	Pivot Pin
27	1	82595	Pivot Pin

NOTE:

- (1) Pivot Pin #86226 is sold only in Pin Kit #86318. Kit Includes one pin #86226, two thrust washers #6623 and two snap rings #1650.
- (2) Pivot Pin #86225 is sold only in Pin Kit #86316. Kit Includes one pin #86226, two thrust washers #6623 and two snap rings #1650.

-511 BOOM & DIPPER ASSEMBLY-

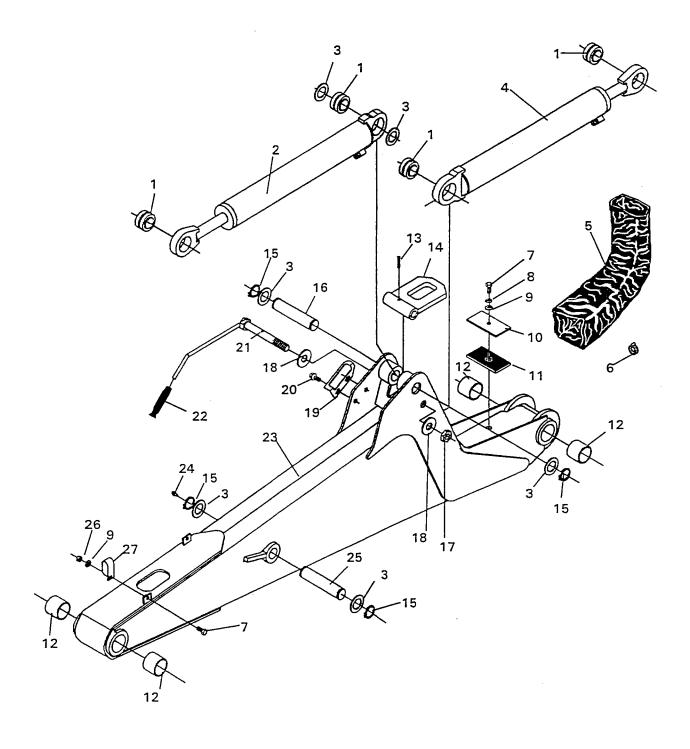

- 511 BOOM & DIPPER ASSEMBLY—


ASSEMBLY #86981

<u>NO</u>	REQ'D	PART NO.		DESCRIPTION
1	_	6615		Self Aligning Bushing
·	•			(Included in Cylinder Assemblies)
2	1	87029		Dipper Cylinder Assembly
	2	6616		Grease Zerk
3	As Req'd	6623		Thrust Washer 1.38" x .031
	As Req'd	64724		Thrust Washer 1.38" x .090
	As Req'd	64725		Thrust Washer 1.38" x .125
4	1	82625		Boom Cylinder Assembly
	2	6616		Grease Zerk
5	1	34120		Hose Sock
6	1	53167		Hose Clamp (Included in Console Assembly)
7	3	1043		.38" UNC X 1.00" Hex Capscrew
8	1	1503		.38" Lock Washer
9	3	1514		.38" Flat Washer
10	1	86221		Hose Clamp Plate
11	1	86222		Rubber Spacer
12	-	86 673		Bushing (Included in Boom Assembly)
				(Installed with Locktite Grade 680)
13	1	1972		Spring Pin
14	1	86 366		Boom Lock
15	4	1650		Snap Ring
16	1	86242	(1)	Pivot Pin
17	1	1959		.88" UNC Jam Nut
18	2	6562		Spring Washer
19	1	84137		Guide Plate
20	2	1953		.38" UNC X .75" Hex FlangeHead Capscrew
21	1	86230		Handle
22	1	83656		Handle Grip
23	1	86955		Boom Assembly (Includes (4) 86673 Bushings) (Installed with Locktite Grade 680)
24	1	6616		Grease Zerk
25	1	86224	(2)	Pivot Pin
26	2	1837		.38" UNC Deformed Lock Nut
27	2	82859		Double Hose Clamp

NOTE:

- (1) Pivot Pin #86242 is sold only in Pin Kit #83615. Kit includes one pin #86242, two thrust washers #6623 and two snap rings #1650.
- Pivot Pin #86224 is sold only in Pin Kit #83619. Kit includes one pin #86224, two thrust washers #6623, two snap rings #1650 and one grease zerk #6616.

511 BOOM & DIPPER ASSEMBLY-

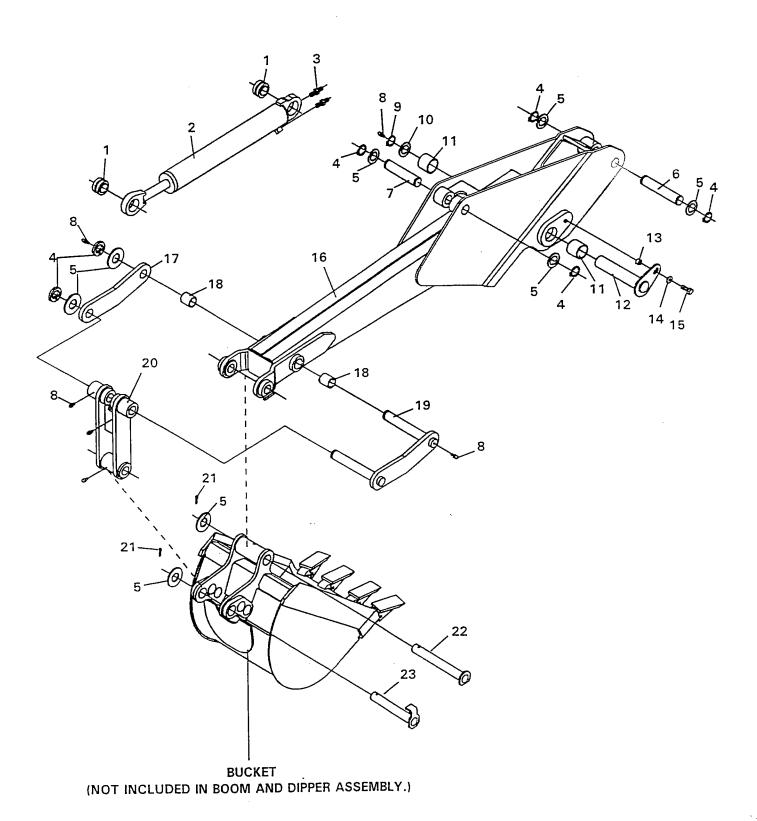

511 BOOM & DIPPER ASSEMBLY—


ASSEMBLY #86981

<u>NO</u>	REQ'D	PART NO.	DESCRIPTION
1 2	- 1	6615 82477	Self-Aligning Bushing (Included in Cylinder Assembly) Bucket Cylinder Assembly
	2	6616	Grease Zerk
3	2	3269	Straight Adapter
4	6	1650	Snap Ring
5	As Req'd	6623	Thrust Washer 1.38" X .031
	As Req'd	64724	Thrust Washer 1.38" X .090
	As Req'd	64725	Thrust Washer 1.38" X .125
_	_	(1)	Discont Die
6	1	86226 (2)	Pivot Pin
7	1	86225	Pivot Pin Grease Zerk
8	6	6616	Snap Ring
9	1	1651	Thrust Washer 1.75 X .082
10	As Req'd	6622	Titust washer 1.75 A .002
11	-	82402	Bushing (Included in Dipper Assembly) (Install with Locktite Grade 680)
12	1	86227	Pivot Pin
13	1	86149	Spacer Tube
14	1	1516	.50" Flat Washer
15	1	1090	.50" UNC X 1.50" Hex Capscrew
16	1	86983	Dipper Assembly (Includes (2) 82402 and (2) 81610 Bushings) (Installed with Locktite Grade 680)
17	1	84914	Dipper Link Plate
18	-	81610	Bushing (Included in Dipper Assembly)
			(Install with Locktite Grade 680)
19	1	83428	Dipper Link
20	1	82523	Bucket Link
0.4	0	1010	Cotter Pin
21	2	1613	Pivot Pin
22	1	82580	
23	1	82595	Pivot Pin

NOTE:

- (1) Pivot Pin #86226 is sold only in Pin Kit #86318. Kit Includes one pin #86226, two thrust washers #6623 and two snap rings #1650.
- (2) Pivot Pin #86225 is sold only in Pin Kit #86316. Kit Includes one pin #86226, two thrust washers #6623 and two snap rings #1650.

CONSOLE ASSEMBLY-

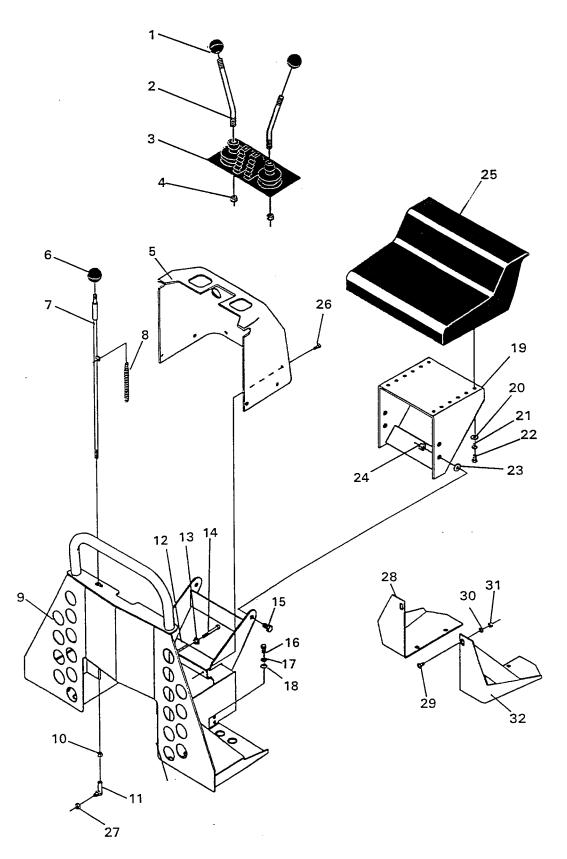


7694 5-25-99

CONSOLE ASSEMBLY —

NO	REQ'D	PART NO.	DESCRIPTION
1	2	83063	Ball Handle
2	2	81871	Control Handle
3	1	83235	Control Lever Boot
4	2	1242	.50" UNC Jam Nut
5	1	83409	Console Cover with Decals
6	1	83406	Ball Handle - RED
7	1	83273	Rod
8	1	82795	Spring
9	1	87288	Console
10	1	1476	.38-24" UNF Jam Nut
11	1	554 5	Balljoint
12	1	87147	Cover Plate
. –	2	1958	.25" UNC X .75" Hex Head Body Bolt
13	3	1926	.31" UNC U-Nut
14	3	1029	.31" UNC X 2.75" Hex Capscrew
15	2	1089	.50" UNC X 1.25" Hex Capscrew
16	4	1042	.38" UNC X .75" Hex Capscrew
17	4	1503	.38" Lock Washer
18	4	1514	.38" Flat Washer
19	1	82999	Seat Mounting
20	10	1513	.31" Flat Washer
21	4	1502	.31" Lock Washer
22	4	1021	.31" UNC X .75" Hex Capscrew
23	2	1516	.50" Flat Washer
24	2	1542	.50" UNC Lock Nut
25	1	6980	Seat
26	6	1958	.25" UNC X .75" Hex Head Body Bolt
27	1	1592	.38" UNF Lock Nut
Repla	cement Bo	olt-On Steps for	units built before June 1, 1999
28	1	82818	Right Step (Located in Mainframe Assembly)
29	6	1925	.31" UNC X .75" Carriage Bolt
			CARL LAND
.30		1502	.31" Lock Washer
30 31	6 6	1502 1225	.31" Lock Washer .31" UNC Hex Nut

-VALVE ASSEMBLY-

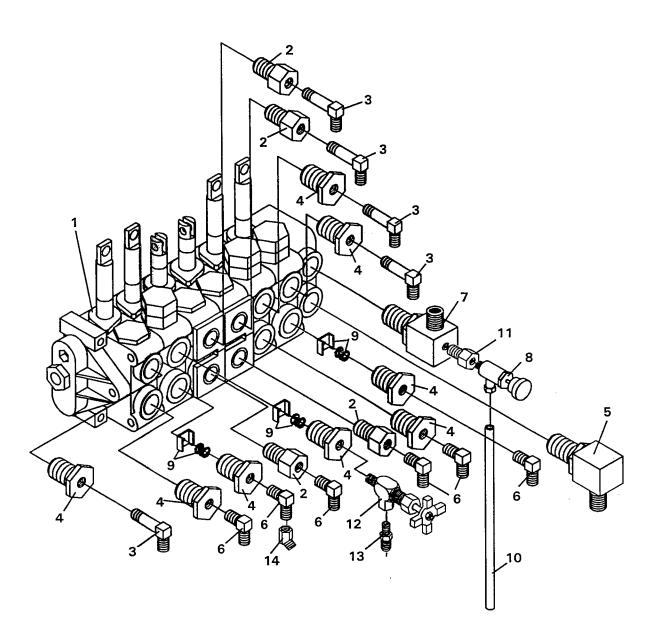


-VALVE ASSEMBLY---

<u>NO</u>	REQ'D	PART NO.	DESCRIPTION
1	1	87773	Gresen Valve - 6 Spool
2	4	3368	O'Ring Adapter 8MBo-4FP
3	5	3088	90° Adapter 4MP-6MJ
4	8	3336	O'Ring Adapter 10MBo-4FP
5	1	3283	90° Adapter 10MBo-8MJ
6	6	3001	90° Adapter 4MP-6MJ
7	1	82094	Special Fitting
8	1	3360	Needle Valve
9	-	45643	Restrictor with Spring109 Dia. Orifice (Included in Valve)
10	1	37578	Plastic Tube .25" X 30" (Located in Console Assembly)
11	1	30151	Straight Adapter
12	1	3185	Needle Valve
13	1	3137	Male Connector 4MP-6MJ
13	l	3137	Iviale Confidence Tivii - Olvio
14	1	3469	45° Elbow 6MP-6FJX (Located in Mainframe Assembly #87446 and used on backhoes with SN #11640 & UP)

				,
				esame ^e


-VALVE ASSEMBLY—

509, 511, 609 & 611 BACKHOE VALVE ASSEMBLY EXCAVATOR CONTROL LEVER PATTERN

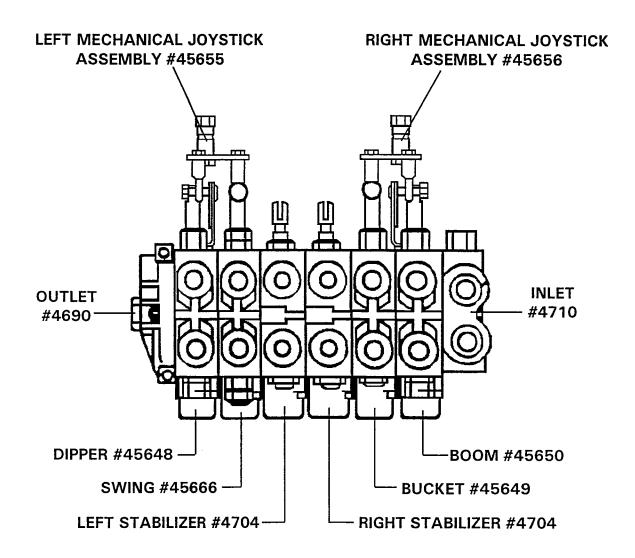

-VALVE ASSEMBLY-

GRESEN INLET COVER

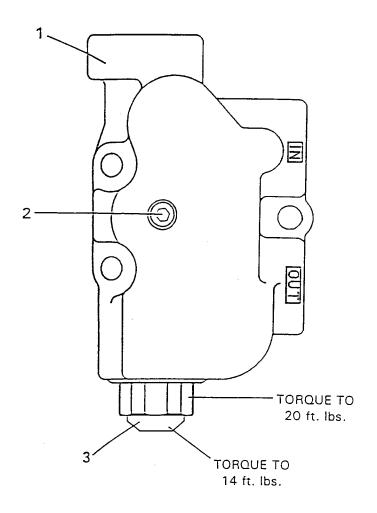

-VALVE ASSEMBLY-

GRESEN INLET COVER


<u>NO</u>	REQ'D	PART NO.	DESCRIPTION
1	1	4710	Inlet Cover #10 Ports
2	1	3156	Plug
3	1	45625	WH Main Relief Valve Assembly @ 2500 PSI

NOTES:

Valve Section Seal Kit #4653 contains (3) Exhaust Passage O-Ring Seals and (2) Pressure Passage O-Ring Seals

- VALVE ASSEMBLY-

GRESEN VALVE SECTION ASSEMBLY #45648 408 Dipper & Bucket Section 509, 511, 609 & 611 Dipper Section

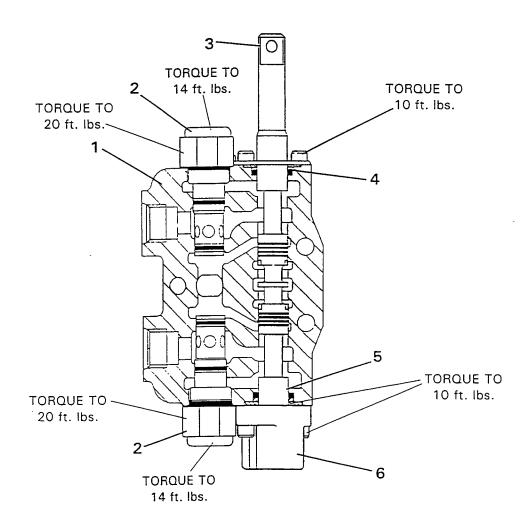

-VALVE ASSEMBLY-

GRESEN VALVE SECTION ASSEMBLY #45648

408 Dipper & Bucket Section 509, 511, 609 & 611 Dipper Section

NO	REQ'D	PART NO.	DESCRIPTION
1	1		Valve Section Housing
2	2	45667	Cylinder Port Relief Assembly @ 2500 PSI
3	1	45653	Spool Clevis Adapter
4	2	45652	Spool Seal Kit
5	1		Spool
6	1	45282	Spool Positioner Assembly

INCLUDED IN VALVE ASSEMBLY BUT NOT IN VALVE SECTION

HILOCOPED HIL IV		
1	45546	Restrictor with Spring095 Dia. Orifice
		(Used in 408 Dipper Section - Top Port)
1	45633	Restrictor with Spring076 Dia. Orifice
		(Used in 408 Bucket Section - Bottom Port)

NOTES:


Items without part numbers are not sold separately.

Valve Section Seal Kit #4653 contains (3) Exhaust Passage O-Ring Seals and (2) Pressure Passage O-Ring Seals.

Complete Section Service Seal Kit #4719 includes ALL seals needed to service one complete valve section.

-VALVE ASSEMBLY-

GRESEN VALVE SECTION ASSEMBLY #45649 509, 511, 609 & 611 Bucket Section

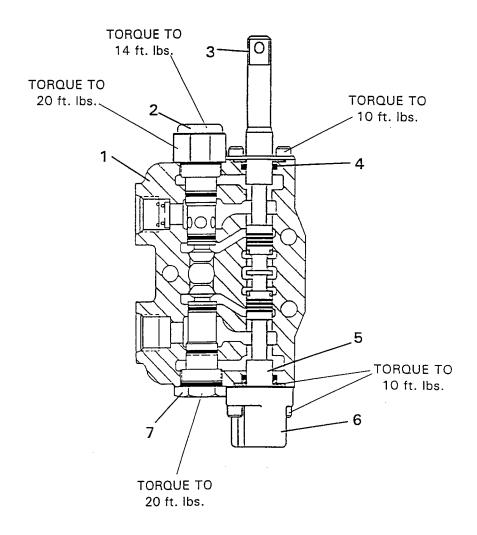

- VALVE ASSEMBLY-

GRESEN VALVE SECTION ASSEMBLY #45649 509, 511, 609 & 611 Bucket Section

REQ'D	PART NO.	DESCRIPTION
1		Valve Section Housing
1	45669	Cylinder Port Relief Assembly @ 3500 PSI
1	45653	Spool Clevis Adapter
2	45652	Spool Seal Kit
1		Spool
1	45282	Spool Positioner Assembly
1	4673	Load Check Plug Assembly
	1 1 1	1 45669 1 45653 2 45652 1 45282

NOTES:

Items without part numbers are not sold separately.


Valve Section Seal Kit #4653 contains (3) Exhaust Passage O-Ring Seals and (2) Pressure Passage O-Ring Seals.

Complete Section Service Seal Kit #4719 includes ALL seals needed to service one complete valve section.

-VALVE ASSEMBLY-

GRESEN VALVE STABILIZER SECTION ASSEMBLY #4704

Horizontal Handle Assembly #45586 (Not included in Valve Section Assembly #4704)

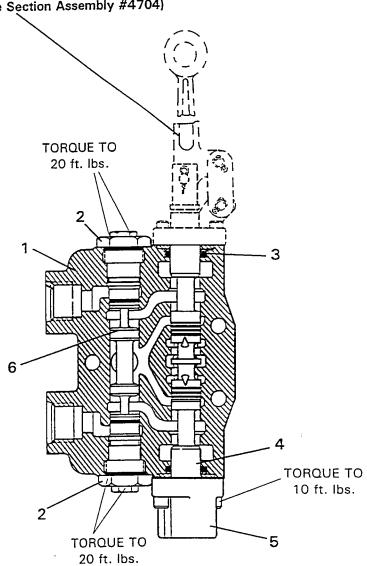

-VALVE ASSEMBLY-

GRESEN VALVE STABILIZER SECTION ASSEMBLY #4704

<u>NO</u>	REQ'D	PART NO.	DESCRIPTION
1 2 3 4 5	1 2 2 1 1	4819 45652 45282	Valve Section Housing Lockout Check Assembly Spool Seal Kit Spool Spool Positioner Assembly
6	1	45654	Unlocking Piston

NOTES:


Items without part numbers are not sold separately.

Valve Section Seal Kit #4653 contains (3) Exhaust Passage O-Ring Seals and (2) Pressure Passage O-Ring Seals.

Complete Section Service Seal Kit #4719 includes ALL seals needed to service one complete valve section.

-VALVE ASSEMBLY-

GRESEN VALVE SECTION ASSEMBLY #45666 509, 511, 609 & 611 Swing Section

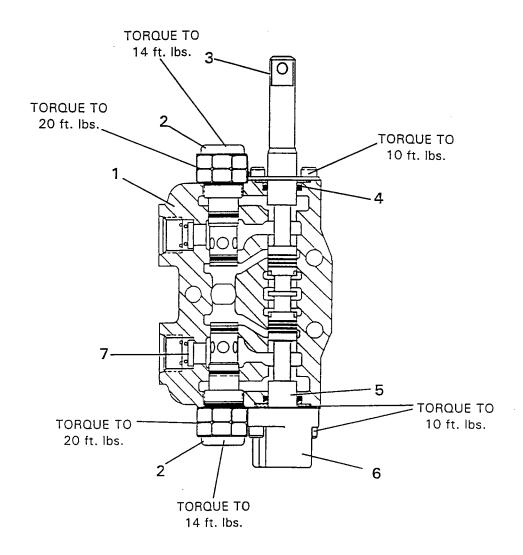

- VALVE ASSEMBLY-

GRESEN VALVE SECTION ASSEMBLY #45666 509, 511, 609 & 611 Swing Section

<u>NO</u>	REQ'D	PART NO.	DESCRIPTION
1	1		Valve Section Housing
2	2	45670	Cylinder Port Relief / Anti-Cav. Check Assembly @ 2500 PSI
3	1	45653	Spool Clevis Adapter
4	2	45652	Spool Seal Kit
5	1		Spool
6	1	45282	Spool Positioner Assembly
7	2	45633	Port Restrictor with Spring .076 Dia. Orifice

NOTES:


Items without part numbers are not sold separately.

Valve Section Seal Kit #4653 contains (3) Exhaust Passage O-Ring Seals and (2) Pressure Passage O-Ring Seals.

Complete Section Service Seal Kit #4719 includes ALL seals needed to service one complete valve section.

- VALVE ASSEMBLY-

GRESEN VALVE SECTION ASSEMBLY #45650 509, 511, 609 & 611 Boom Section

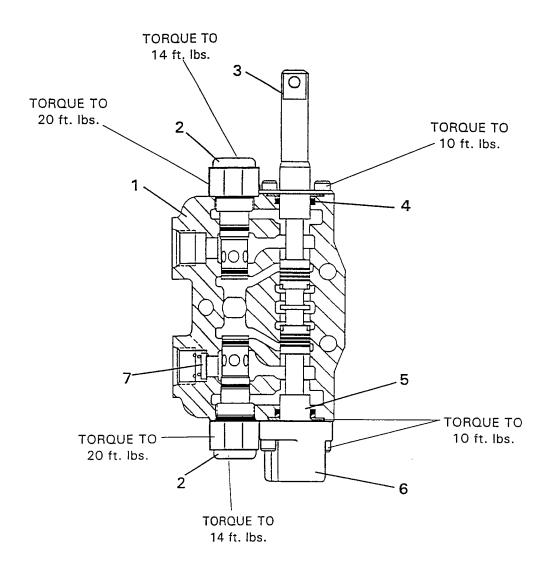

-VALVE ASSEMBLY-

GRESEN VALVE SECTION ASSEMBLY #45650 509, 511, 609 & 611 Boom Section

<u>NO</u>	REQ'D	PART NO.	DESCRIPTION
1 2	1 2	45668	Valve Section Housing Cylinder Port Relief Assembly @ 3000 PSI
3	1	45653	Spool Clevis Adapter
4	2	45652	Spool Seal Kit
5	1		Spool
6	1	45282	Spool Positioner Assembly
7	2	45643	Port Restrictor with Spring .109 Dia. Orifice

NOTES:

Items without part numbers are not sold separately.


Valve Section Seal Kit #4653 contains (3) Exhaust Passage O-Ring Seals and (2) Pressure Passage O-Ring Seals.


Complete Section Service Seal Kit #4719 includes ALL seals needed to service one complete valve section.

6952

VALVE ASSEMBLY

GRESEN OUTLET COVER

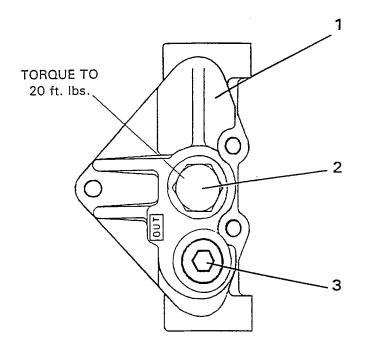

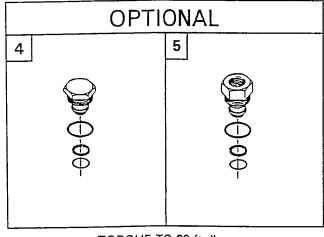

TORQUE TO 20 ft. lbs.

- VALVÉ ASSEMBLY-

GRESEN OUTLET COVER

<u>NO</u>	REQ'D	PART NO.	DESCRIPTION
1	1	4690	Outlet Cover
2	1	4691	Open Center Plug Assembly
3	1	3234	(Includes Open Center Plug & Main O-Ring Seal #4693) Plug

OPTIONAL


4	-	6977	Closed Center Plug Assembly (Includes Main O-Ring Seal #4693)
5	-	4698	Power Beyond Sleeve Assembly (Includes Main O-Ring Seal #4693)

NOTES:

Valve Section Seal Kit #4653 contains (3) Exhaust Passage O-Ring Seals and (2) Pressure Passage O-Ring Seals.

-VALVE ASSEMBLY-

LEFT MECHANICAL JOYSTICK ASSEMBLY #45655 RIGHT MECHANICAL JOYSTICK ASSEMBLY #45656

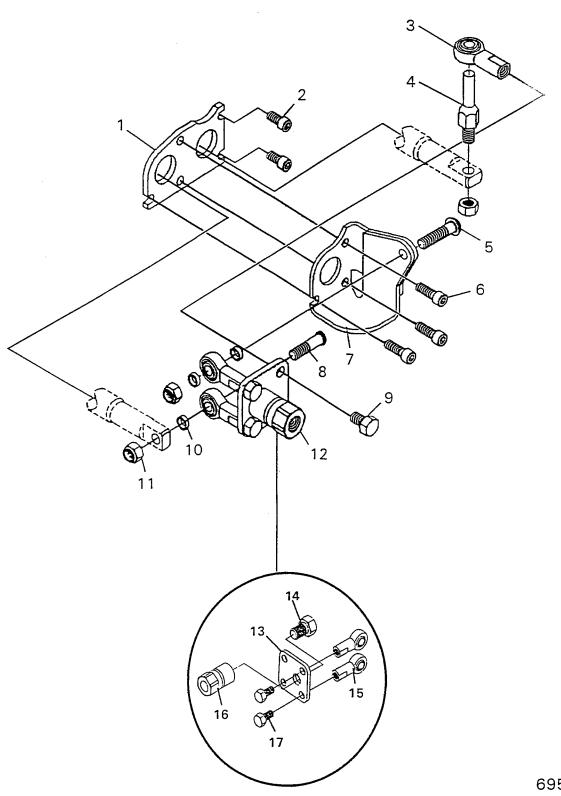

6959 5-16-96


-VALVE ASSEMBLY—

LEFT MECHANICAL JOYSTICK ASSEMBLY #45655 RIGHT MECHANICAL JOYSTICK ASSEMBLY #45656

<u>NO</u>	REQ'D	PART NO.	DESCRIPTION
1	1	45657	Mounting Plate
2	2	1943	Screw
3	1	45664	Rod End
4	1	45662	Mechanical Slide
5	1	1945	Screw
6	3	1944	Screw
7	1	45658	Bracket - Left
•	1	45659	Bracket - Right
8	1	45661	Rod End Stud
9	1	1271	Screw
10	3	45660	Spacer ·
11	3	1942	Lock Nut
12	1	45663	Handle Plate Assembly (Includes Items #13 through #17)
13	1	45671	Mechanical Joystick Plate
14	1	1087	Screw
15	2	45664	Female Rod End
16	1	45672	Handle Adapter
17	2	1271	Screw

-VALVE ASSEMBLY-

Horizontal Handle and Bracket Assembly #45586

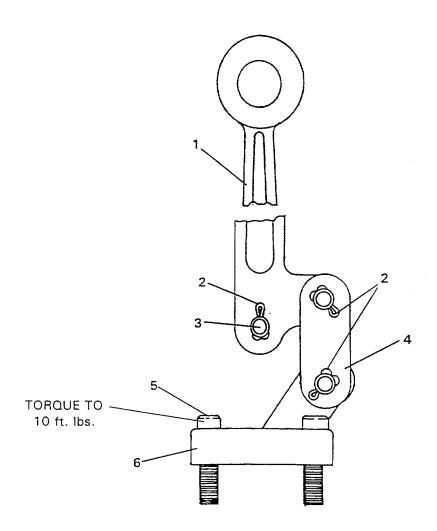

-VALVE ASSEMBLY-


Horizontal Handle and Bracket Assembly #45586


<u>NO</u>	REQ'D	PART NO.	DESCRIPTION
1	1	*	Handle
2	3	*	Cotter Pin
3	1	*	Pin
4	1	*	Link
	1	*	Link Plate
5	2	*	Screw
6	1	*	Bracket


* NOTE: All parts marked with an asterisk (*) are included in Horizontal Handle and Bracket Assembly #45586. Parts are not sold separately.

- VALVE ASSEMBLY-

GRESEN VALVE SERVICE PARTS

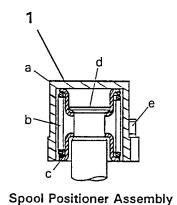


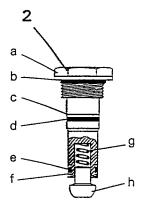

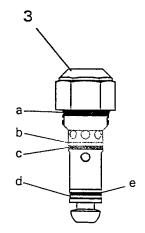



Load Check Plug Assembly

Cylinder Port Relief Assembly

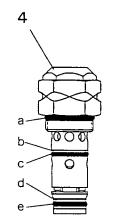


Cylinder Port Relief Assembly

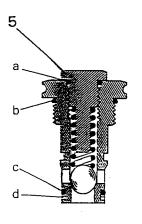

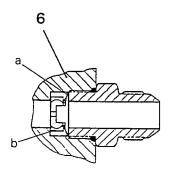

Port Restrictor and Spring Assembly

Lockout Check Assembly

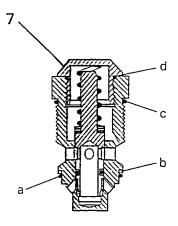


WH Main Relief Valve Assembly

-VALVE ASSEMBLY—

GRESEN VALVE SERVICE PARTS

<u>NO</u> 1	<u>PART NO.</u> 45282	DESCRIPTION Spool Positioner Assembly	
		a Bonnet	
		b Spring c Spring Collar	
		c Spring Collar d Spool Spud	
		e Screw	
2	4673	Load Check Plug Assembly (Seal Kit #4822)	
		a Plug	
		b 0-Ring S eal c Backup Ring	
		c Backup Ring d 0-Ring Seal	
		e Backup Ring	
		f O-Ring Seal	
		g Spring h Poppet	
3	45667	Cylinder Port Relief Assembly @ 2500 PSI	
3	45668	Cylinder Port Relief Assembly @ 3000 PSI	
	45669	Cylinder Port Relief Assembly @ 3500 PSI	
		tolerances only the seals may be serviced in the field.)	
	4822	Seal Kit	
		a 0-Ring Seal b Backup Ring	
		b Backup Hing C O-Ring Seal	
		d Backup Ring	
_		e O-Ring Seal	
4	45670	Relief/Anti-Cav. Check Assembly @ 2500 PSI tolerances only the seals may be serviced in the field.)	
	4822	Seal Kit	
		a O-Ring Seal b Backup Ring	
		c 0-Ring Seal	
		d Backup Ring	
5	4819	e 0-Ring Seal Lockout Check Assembly	
5		tolerances only the seals may be serviced in the field.)	
	4829	Seal Kit	
		a O-Ring Seal b Backup Ring	
		b Backup King c O-Ring Seal	
		d Backup Ring	
6	45633	Port Restrictor Assembly .076 Dia. Orifice	
	45643	Port Restrictor Assembly .109 Dia. Orifice	
		a Spring b Orifice Plate	
7	45625	b Onlice Plate WH Main Relief Valve Assembly @ 2500 PSI	
		only the seals may be serviced in the field.)	
(540	45142	Seal Kit	
		a O-Ring Seal	
		b Backup Ring c O-Ring Seal	
		c U-Ring Seal 6958	
		5-15-96	

SWING CYLINDER ASSEMBLY #81827

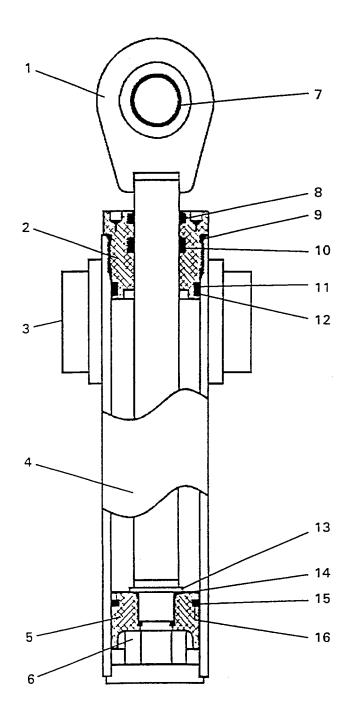


SWING CYLINDER ASSEMBLY #81827

<u>NO</u>	REQ'D	PART NO.	DESCRIPTION
1	1	81024	Cylinder Rod
2	1	77458	Cylinder Gland
3	2	82441	Needle Bearing
4	1	81960	Cylinder Tube
5	1	81963	Piston
6	1	1483	Hex Nut
7	1	62523	Self Aligning Bushing
8	1	45389*	Rod Wiper
9	1	45250*	O'Ring
10	1	45219*	Poly Pak Seal
11	1	4510*	Back-Up Ring
12	1	4509*	O'Ring
13	1	5421	Washer
14	1	4641*	O'Ring
15	1	4644*	Piston Ring
16	1	4645*	O'Ring

NOTE: Seal Kit #45617 Includes all parts marked with an asterisk (*). Parts are not sold separately.

STABILIZER CYLINDER ASSEMBLY #86605 (1.50" DIAMETER CYLINDER ROD)

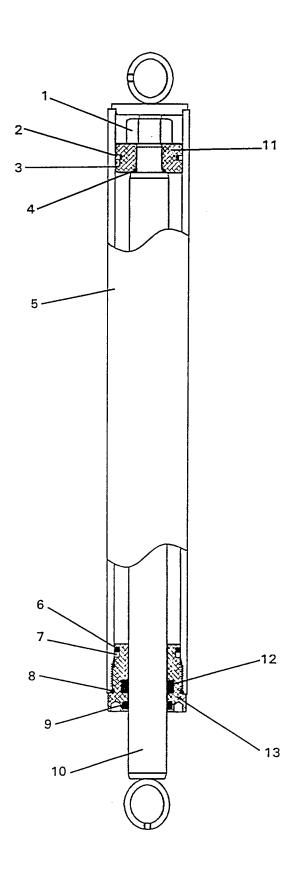


STABILIZER CYLINDER ASSEMBLY #86605 (1.50" DIAMETER CYLINDER ROD)

<u>NO</u>	REQ'D	PART NO.	DESCRIPTION
1 2 3 4 5	1 1 1 1	1483 4644* 4645* 4641* 83398	Hex Nut Teflon Piston Ring O'Ring O'Ring Cylinder Tube
6 7 8 9 10	1 1 1 1	4509* 4510* 45250* 45372* 86606	O'Ring Back-Up Ring O'Ring Rod Wiper Cylinder Rod
11 12 13	1 1 1	50252 45225* 86609	Piston Poly-Pak Seal Cylinder Gland

NOTE: Seal Kit #45738 includes all parts marked with an asterisk (*). Parts are not sold separately.

BOOM CYLINDER ASSEMBLY #86231

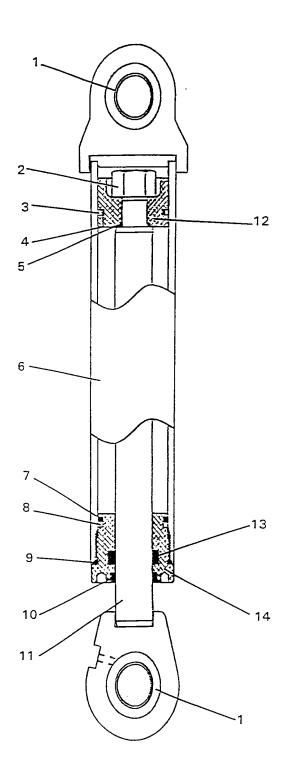


BOOM CYLINDER ASSEMBLY #86231

<u>NO</u>	REQ'D	PART NO.	DESCRIPTION
1 2 3 4 5	2 1 1 1	6615 1483 45251* 45250* 4641*	Self-Aligning Bushing Hex Nut Teflon Piston Ring O'Ring O'Ring
6 7 8 9 10	1 1 1 1	86232 45557* 45249* 4570* 45372*	Cylinder Tube O'Ring Back-Up Ring O'Ring Rod Wiper
11 12 13 14	1 1 1	86234 82857 45225* 82449	Cylinder Rod Piston Poly-Pak Seal Cylinder Gland

NOTE: Seal Kit #45618 includes all parts marked with an asterisk (*). Parts are not sold separately.

BOOM CYLINDER ASSEMBLY #82625

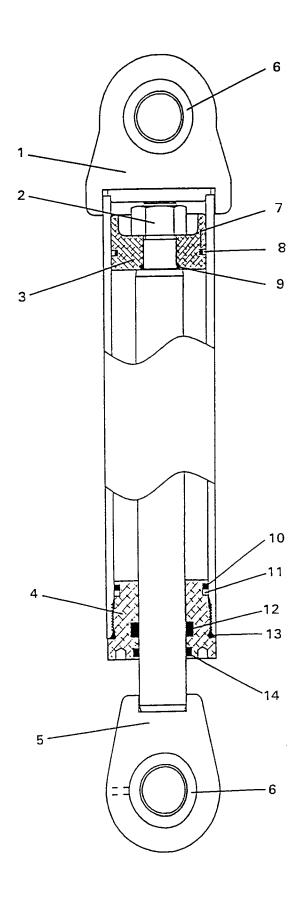


BOOM CYLINDER ASSEMBLY #82625

<u>NO</u>	REQ'D	PART NO.	DESCRIPTION
1	1	82635	Cylinder Tube
2	1	1483	Hex Nut
3	1	82793	Piston
4	1	77445	Cylinder Gland
5	1	82636	Cylinder Rod
6	. 2	6615	Self Aligning Bushing
7	1	4570*	O'Ring
8	1	4569*	Piston Ring
9	1	4641*	O'Ring
10	1	45555*	O'Ring
11	1	4631*	Back-Up Ring
12	1	45225*	Poly Pak Seal
13	, 1	4908*	O'Ring
14	1	45372*	Rod Wiper

NOTE: Seal Kit #45550 includes all parts marked with an asterisk (*). Parts are not sold separately.

DIPPER CYLINDER ASSEMBLY #86236

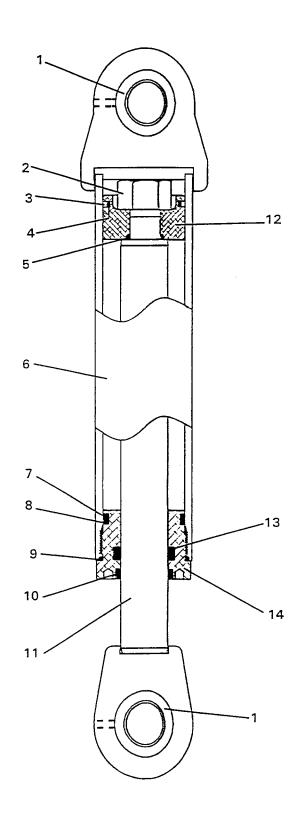


DIPPER CYLINDER ASSEMBLY #86236

REQ'D	PART NO.	DESCRIPTION
1	6615	Self-Aligning Bushing
1	1484	Hex Nut
1	4569*	Teflon Piston Ring
1	4570*	O'Ring
1	4865*	O'Ring
1	86237	Cylinder Tube
1	45555*	O'Ring
1	4631*	Back-Up Ring
1	4908*	O'Ring
1	45370*	Rod Wiper
1	82626	Cylinder Rod
1	86241	Piston
1	45119*	Poly-Pak Seal
1	77443	Cylinder Gland
	REQ'D 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 6615 1 1484 1 4569* 1 4570* 1 4865* 1 86237 1 45555* 1 4631* 1 4908* 1 45370* 1 82626 1 86241 1 45119*

NOTE: Seal Kit #45684 includes all parts marked with an asterisk (*). Parts are not sold separately.

DIPPER CYLINDER ASSEMBLY #87029

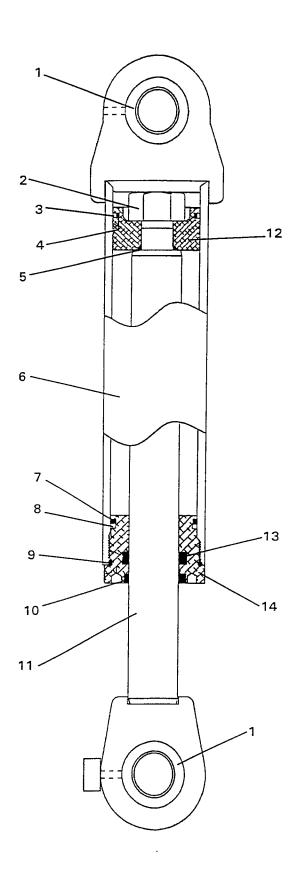


DIPPER CYLINDER ASSEMBLY #87029

<u>NO</u>	REQ'D	PART NO.	DESCRIPTION
1	1	6615	Self-Aligning Bushing
2	1	1484	Hex Nut
3	1	4569*	Teflon Piston Ring
4	1	4570*	O'Ring
5	1	4865*	O'Ring
6	1	87036	Cylinder Tube
7	1	45555*	O'Ring
8	1	4631*	Back-Up Ring
9	1	4908*	O'Ring
10	1	45370*	Rod Wiper
11	1	87036	Cylinder Rod
12	1	86241	Piston
13	1	45119*	Poly-Pak Seal
14	1	77443	Cylinder Gland

NOTE: Seal Kit #45684 includes all parts marked with an asterisk (*). Parts are not sold separately.

BUCKET CYLINDER ASSEMBLY #82477

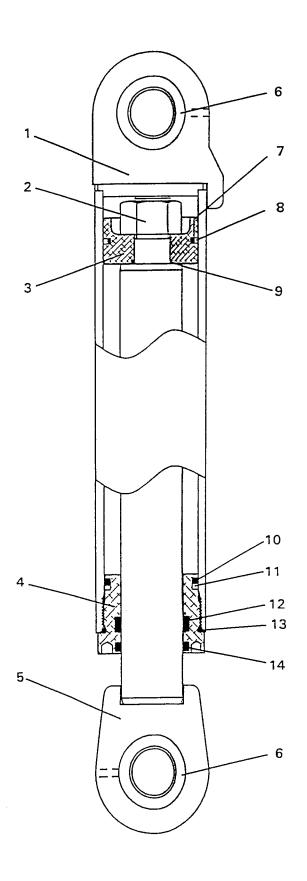

BUCKET CYLINDER ASSEMBLY #82477


NO	REQ'D	PART NO.	DESCRIPTION
4	1	82505	Cylinder Tube
1	1		•
2	1	1484	Hex Nut
3	1	55904	Piston
4	1	77444	Cylinder Gland
5	1	82506	Cylinder Rod
_	_		
6	2	6615	Self Aligning Bushing
7	1	4570*	O'Ring
8	1	4569*	Piston Ring
9	1	4865*	O'Ring
10	1	45555*	O'Ring
11	1	4621*	Back-Up Ring
11		4631*	, •
12	1	45117*	Poly Pak Seal
13	1	4908*	O'Ring
14	1	45364*	Rod Wiper


NOTE: Seal Kit #45547 includes all parts marked with an asterisk (*). Parts are not sold separately.

MAINFRAME HOSE SET-

ASSEMBLY #83434 408 BACKHOE SN #11870 & UP & 509 BACKHOE SN #11640 & UP (ALL 511 BACKHOES)

HYDRAULIC CONTROL VALVE

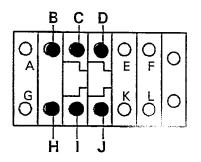

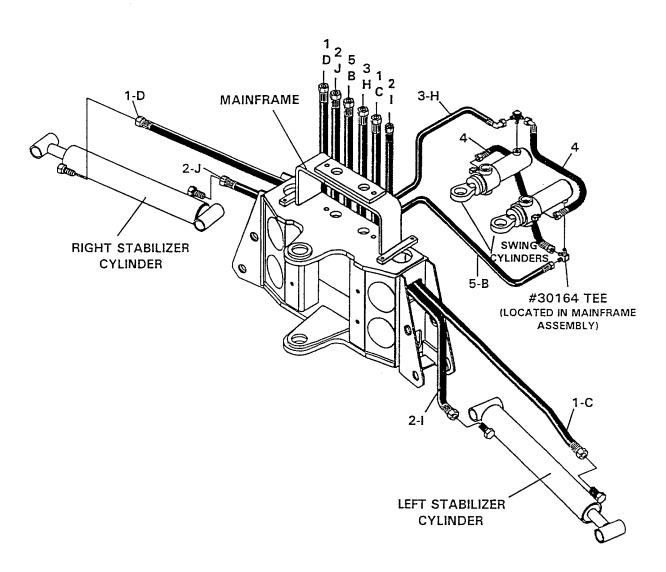

MAINFRAME HOSE SET-

ASSEMBLY #83434 408 BACKHOE SN #11870 & UP & 509 BACKHOE SN #11640 & UP (ALL 511 BACKHOES)

<u>NO</u>	REQ'D	PART NO.	DESCRIPTION
1	2	37580	Hose Assembly .25" X 54" 6FJX-6FJX
2	2	37579	Hose Assembly .25" X 51" 6FJX-6FJX
3	1	37700	Hose Assembly .25" X 12" 6FJX-6FJX 45° Gooseneck
4	2	37552	Hose Assembly .25" X 14.50" 6FJX-6FJX
5	1	37699	Hose Assembly .25" X 17" 6FJX-6FJX


NOTE: Refer to the mainframe assembly for the priority valve hoses which are included in this assembly but have been shown in the mainframe assembly for clarity.


NOTE: Letters on the hose set diagram show the hydaulic hose routing between the backhoe control valve and the various hydraulic cylinders. Simply match the letter on the control valve port to the same letter on the hydraulic hose ends. Example: Hose Assembly labeled "C" runs from the upper Left Stabilizer port on the hydraulic control valve - through the mainframe and to the barrel end fitting on the left stabilizer cylinder.

NOTE: The fittings on the hydraulic cylinders have been altered for clarity purposes. This will assist you in distinguishing between the rod end and the barrel end of the various hydraulic cylinders.

-509 BOOM & DIPPER HOSE SET-

EXCAVATOR CONTROL LEVER PATTERN ASSEMBLY #85448

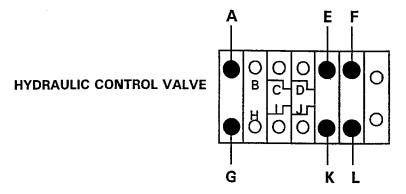

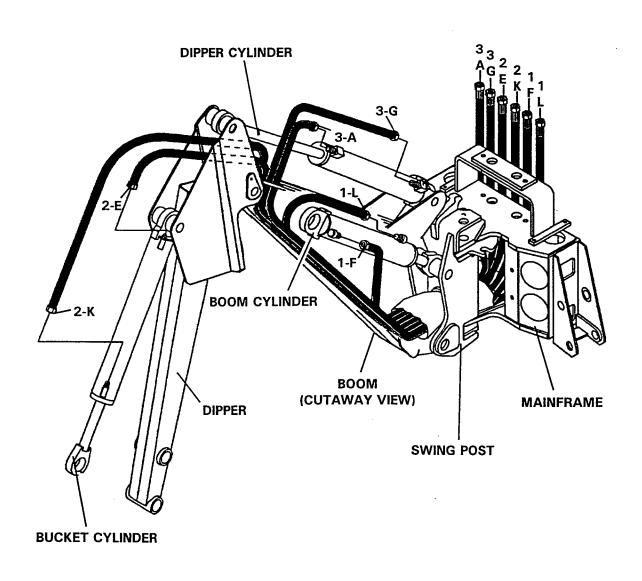

509 BOOM & DIPPER HOSE SET-

EXCAVATOR CONTROL LEVER PATTERN ASSEMBLY #85448

NO	REQ'D	PART NO.	DESCRIPTION	
1	2	37671	Hose Assembly 6FJX - 6FJX	.38" X 93"
2	2	37673	Hose Assembly 6FJX - 6FJX	.38" X 137.50"
3	2	37672	Hose Assembly 6FJX - 6FJX	.38" X 135"


NOTE: Letters on the hose set diagram show the hydraulic hose routing between the backhoe control valve and the various hydraulic cylinders. Simply match the letter on the control valve port to the same letter on the hydraulic hose ends. EXAMPLE: Hose Assemby labeled "G" runs from the lower Dipper port of the hydraulic control valve - through the mainframe and swing post and to the rod end of the dipper cylinder.


NOTE: The fittings on the hydraulic cylinders have been altered for clarity purposes. This will assist you in distinguishing between the rod end and the barrel end of the various hydraulic cylinders.

-511 BOOM & DIPPER HOSE SET-

EXCAVATOR CONTROL LEVER PATTERN ASSEMBLY #86982

HYDRAULIC CONTROL VALVE

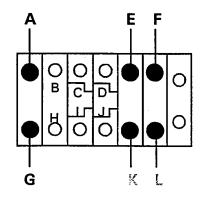

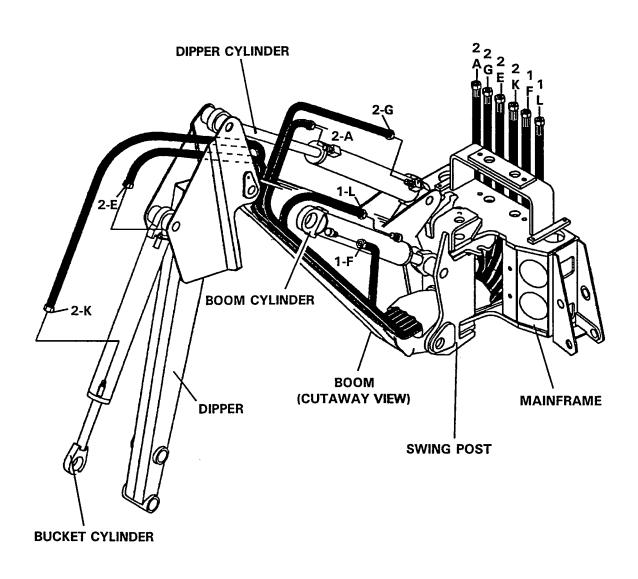

511 BOOM & DIPPER HOSE SET-


EXCAVATOR CONTROL LEVER PATTERN ASSEMBLY #86982

<u>NO</u>	REQ'D	PART NO.	DESCRIPTION	
1	2	37671	Hose Assembly 6FJX - 6FJX	.38" X 93"
2	4	37701	Hose Assembly 6FJX - 6FJX	.38" X 157.50"

NOTE: Letters on the hose set diagram show the hydraulic hose routing between the backhoe control valve and the various hydraulic cylinders. Simply match the letter on the control valve port to the same letter on the hydraulic hose ends. EXAMPLE: Hose Assemby labeled "G" runs from the lower Dipper port of the hydraulic control valve - through the mainframe and swing post and to the rod end of the dipper cylinder.

NOTE: The fittings on the hydraulic cylinders have been altered for clarity purposes. This will assist you in distinguishing between the rod end and the barrel end of the various hydraulic cylinders.

STABILIZER PADS

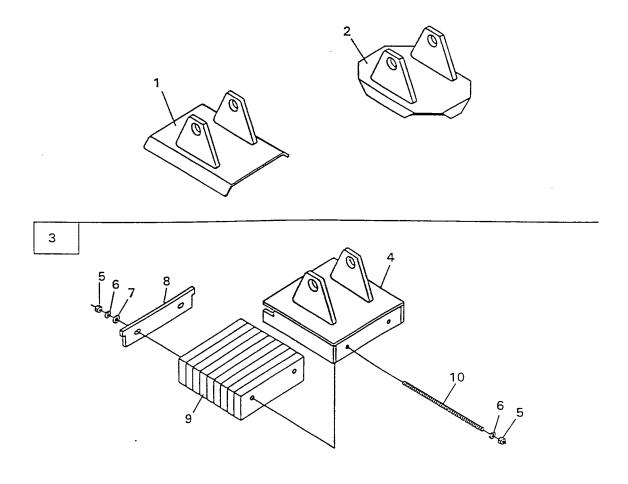


-STABILIZER PADS -

<u>NO</u>	REQ'D	PART NO.	DESCRIPTION	
	FI	AT STABILIZE	ER PAD ASSEMBLY - #81861	
1	2	81865	Flat Stabilizer Pad	
	GRO	USER STABIL	IZER PAD ASSEMBLY - #81860	
2	2	83421	Grouser Stabilizer Pad	
RUBBER STABILIZER PAD ASSEMBLY - #81862				
3	2	83418	Rubber Stabilizer Pad Assembly (Includes Items 4 through 10)	
4	1	83419	Stabilizer Pad	
5	4	1226	.38" UNC Hex Nut	
6	4	1503	.38" Lock Washer	
7	2	1514	.38" Flat Washer	
8	1	51190	Slide Plate	
9	1	64412	Rubber Strip Bundle	
10	2	1661	.38" UNC X 11.50" Readi Bolt	

STABILIZER PADS-

FLIP-OVER STABILIZER PAD ASSEMBLY #83091 (COMPLETE SET OF (2) FLIP-OVER PADS - ASSEMBLY #83058)

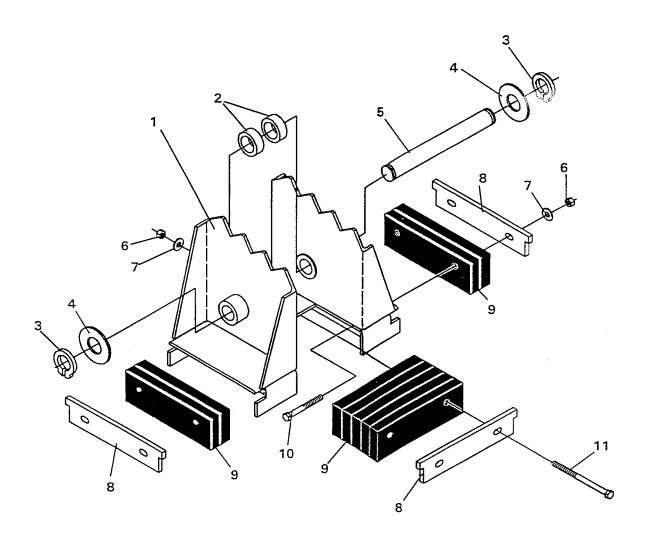


-STABILIZER PADS-

FLIP-OVER STABILIZER PAD ASSEMBLY #83091 (COMPLETE SET OF (2) FLIP-OVER PADS - ASSEMBLY #83058)

<u>NO</u>	REQ'D	PART NO.	DESCRIPTION
1	1	84496	Flip-Over Pad
2	2	84495	Spacer
3	2	1652	1.25" Snap Ring
4	VARIES	57693	Thrust Washer 1.25" X .078"
	VARIES	64727	Thrust Washer 1.25" X .125"
5	1 .	83096	Pin
6	6	1837	.38" UNC Hex Deformed Lock Nut
7	6	1514	.38" Flat Washer
8	3	51190	Slide Plate
9	1	64412	Rubber Strip Bundle
10	4	1053	.38" UNC X 3.50" Hex Capscrew
11	2	1057	.38" UNC X 5.00" Hex Capscrew

OPTIONAL STABILIZER CYLINDER COVER

STABILIZER CYLINDER COVER ASSEMBLY #86706

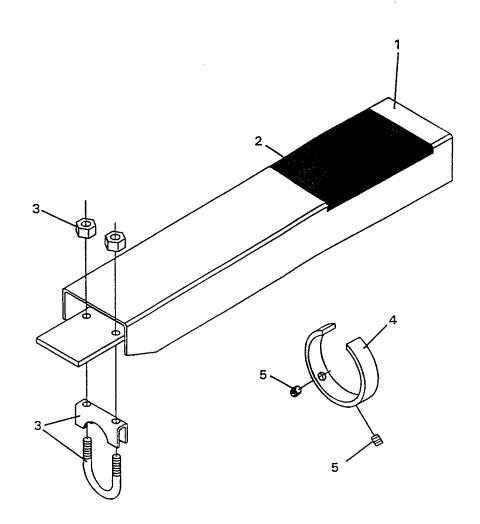


OPTIONAL STABILIZER CYLINDER COVER

STABILIZER CYLINDER COVER ASSEMBLY #86706

<u>NO</u>	REQ'D	PART NO.	DESCRIPTION
1	2	83915	Stabilizer Cylinder Cover with Decal
2	2	4167	No Step Decal
3	2	83906	1.50" Clamp Assembly
4	2	83911	Guide Ring
5	4	1575	.38" UNC X .50" Set Screw

BUCKET ASSEMBLIES -

SEVERE DUTY BUCKETS

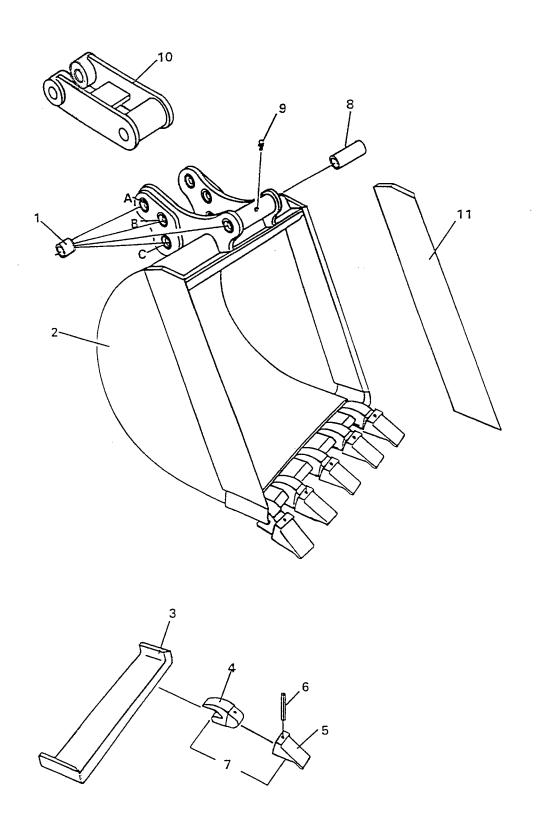

BUCKET ASSEMBLIES

SEVERE DUTY BUCKETS

<u>NO</u>	REQ'D	PART NO.	DESCRIPTION
1	8 8	68043 6355	Bushing (MD2 Series Backhoes) Bushing (HD, 500 & 600 Series Backhoes)
2	1	85225 85226 85227 85228 85229	12" Bucket Weldment 16" Bucket Weldment 18" Bucket Weldment 20" Bucket Weldment 24" Bucket Weldment
3	1	85236 85241 85246 85251 85256	12" Replacement Front Cutter Edge 16" Replacement Front Cutter Edge 18" Replacement Front Cutter Edge 20" Replacement Front Cutter Edge 24" Replacement Front Cutter Edge
4 5 6 7	Varies Varies Varies Varies	74228 84863 74227 85003	Replacement Tooth Shank (Weld On) Replacement Tooth (Bolt On) Spiral Roll Pin Replacement Tooth Point and Shank Assy
8	1	68482	Spacer
9	1	66 16	Grease Zerk
10	Optional	51 540	8.5" Bell Hole Bucket Link (Requires 3 Grease Zerks #6616)
11	1 1	67151 67152	Left Replacement Side Cutter Right Replacement Side Cutter

NOTE:

Severe duty buckets have three different bucket link positions for different digging needs.


Position "A" digging position for added digging force in hard ground.

Position "B" truck loading position for greater ease of spoil removal and higher dump height.

Position "C" standard digging position with a good balance of digging force and bucket rotation for general digging use.

7345

-509 FIRST LINE REPAIR KIT—

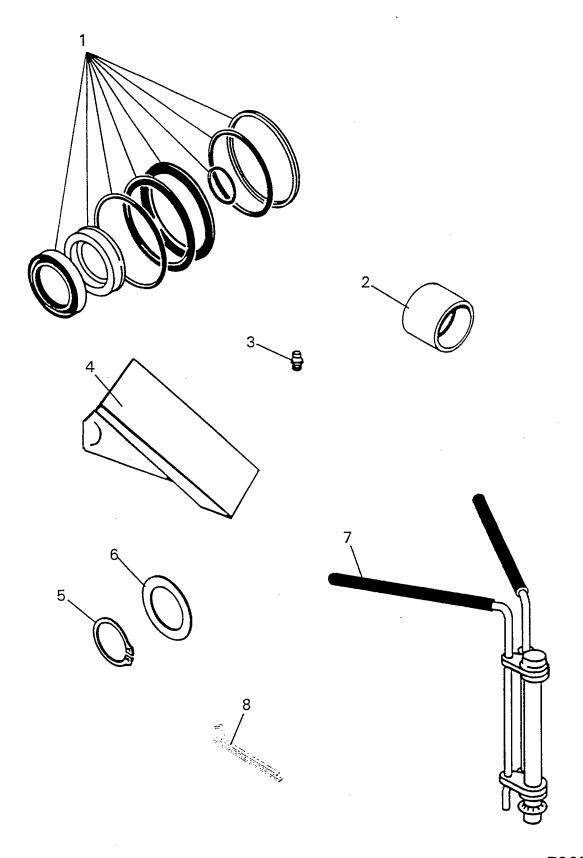


7368 5-25-99-2

- 509 FIRST LINE REPAIR KIT-

NO	REQ'D	PART NO.	DESCRIPTION
1	1	45618	Seal Kit (Boom Cylinder)
	1	45547	Seal Kit (Bucket Cylinder)
	1	45684	Seal Kit (Dipper Cylinder)
	1	45738	Seal Kit (Stabilizer Cylinders)
	1	45617	Seal Kit (Swing Cylinder)
2	2	81610	Bushing
	2	6355	Bushi ng
3	4	6616	Grease Zerk
4	4	84863	Bucket Tooth Point
5	4	1650	Snap Ring 1.38"
	2	1652	Snap Ring 1.25"
6	4	6623	Thrust Washer 1.38" X .031"
	4	64728	Thrust Washer 1.25" X .031"
7	1	65349	Cylinder Seal Install Tool
8	2	1613	Cotter Pin

-511 FIRST LINE REPAIR KIT———

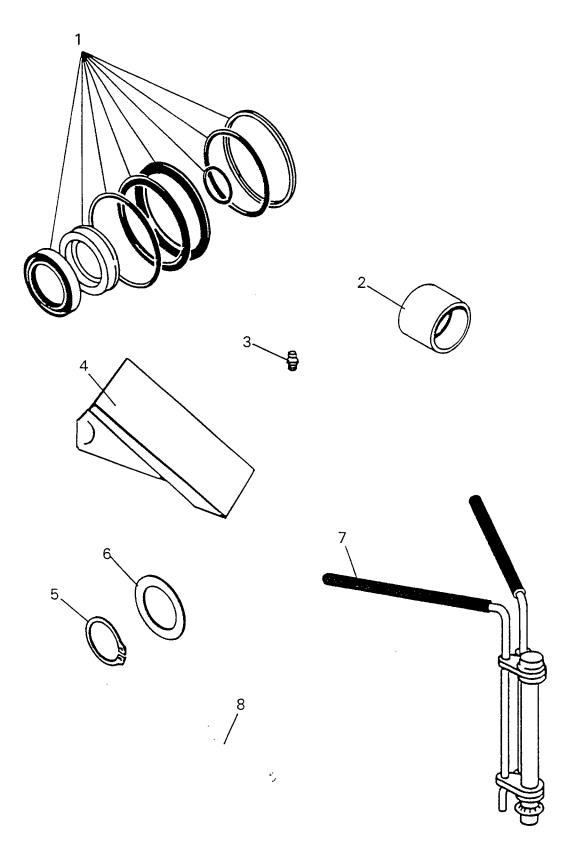

7700 5-25-99

- 511 FIRST LINE REPAIR KIT——


NO	REQ'D	PART NO.	DESCRIPTION
1	1	45539	Seal Kit (Boom Cylinder)
	1	45547	Seal Kit (Bucket Cylinder)
	1	45684	Seal Kit (Dipper Cylinder)
	1	45738	Seal Kit (Stabilizer Cylinders)
	1	45617	Seal Kit (Swing Cylinder)
2	2	6355	Bushing
3	4	6616	Grease Zerk
4	4	84863	Bucket Tooth Point
5	4	1650	Snap Ring 1.38"
	2	1652	Snap Ring 1.25"
6	4	6623	Thrust Washer 1.38" X .031"
	4	64728	Thrust Washer 1.25" X .031"
7	1	65349	Cylinder Seal Install Tool
8	2	1613	Cotter Pin


DECALS-

DECAL PLACEMENT - EXCAVATOR CONTROL LEVER PATTERN

GENERAL INFORMATION

The diagrams on this page shows the location of all the decals used on the 500 series backhoes with the excavator control lever pattern. The decals are identified by their part numbers, with reductions of the actual decals located on the following pages. Use this information to order replacements for lost or damaged decals. Be sure to read all decals before operating the backhoe. They contain information you need to know for both safety and backhoe longevity.

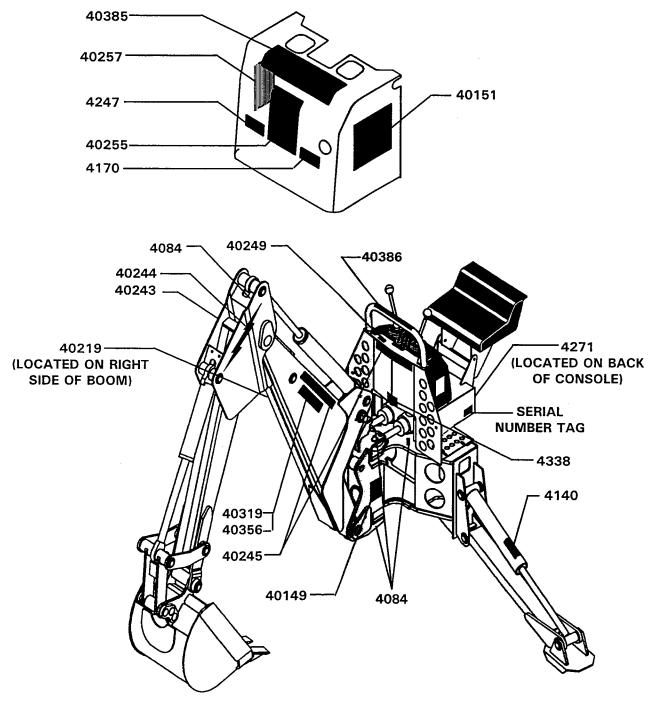

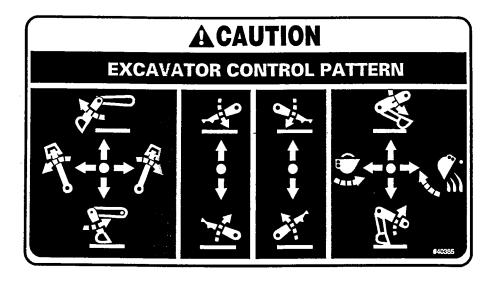


PART #40385
EXCAVATOR CONTROL PATTERN OPERATING DECAL


PETCOCK

OPEN TO RELIEVE PRESSURE WHEN HOOKING UP HYDRAULIC COUPLERS. ALWAYS CLOSE PETCOCK BEFORE OPERATING BACKHOE.

 
PART #4170
PETCOCK OPERATION DECAL



PART #40219 BOOM LOCK DECAL

 

PART #4247 SWING SPEED CONTROL DECAL

 

PART #40249 SWING LOCK DECAL

ACAUTION EXCAVATOR CONTROL PATTERN

PART #40386
CAUTION! EXCAVATOR CONTROL PATTERN

IMPORTANT

The backhoe bucket is capable of contacting this stabilizer and/or cylinder. Carefull operation will avoid backhoe damage.

PART #4140 BUCKET CONTACT WARNING DECAL



PART #4084 **GREASE 8 HOURS**



PART #4338 MADE IN U.S.A. DECAL



HIGH-PRESSURE FLUID HAZARD

To prevent serious injury or death:

- Relieve pressure on system before repairing or adjusting or disconnecting.
- Wear proper hand and eye protection when searching for leaks. Use wood or cardboard instead of hands.
- Keep all components in good repair.

£40151

PART #40151 HIGH PRESSURE FLUID DECAL

IMPORTANT

TO PREVENT BACKHOE DAMAGE:

- DO NOT ATTACH TOW CHAIN DIPPER OR BUCKET.
- DO NOT REPEATEDLY SLAM SWING POST INTO SWING STOPS.

PREPARATION FOR STORAGE

LUBRICATE ALL GREASE POINTS. LEAVE AS MANY CYLINDERS IN CLOSED POSITION AS POSSIBLE. COVER ALL EXPOSED CYLINDER RODS WITH A LIGHT COAT OF GREASE.

940257

PART #40257 IMPORTANT! DECAL

WARNING

TO PREVENT SERIOUS INJURY OR DEATH:

- Do not operate or work on this machine without reading and understanding Operator's Manual.
- Avoid unsafe operation or maintenance.
- Do not operate machine with guards and covers removed.
- This machine was designed to be operated by one operator. Do not carry passengers on unit.
- Before installing backhoe on your unit extend boom and dipperstick and lower bucket to ground.
- Never use backhoe as manlift.
- Operate backhoe control levers from operator's seat only. Lower stabilizers and bucket to ground before leaving operator's seat.
- Engage boom lock and swing lock before transporting backhoe.

#40255

PART #40255
OPERATIONAL WARNING DECAL



To prevent serious injury or death from pinching:

 Keep all persons and objects clear while any part of this machine is in motion.

SW205

PART #40149
DANGER! PINCH POINTS


BRADCO

PART #40245 (3 REQ'D)
BRADCO LOGO - SILVER

509

PART #40319 (2 REQ'D) 509 MODEL NUMBER 511

PART #40356 (2 REQ'D) 511 MODEL NUMBER

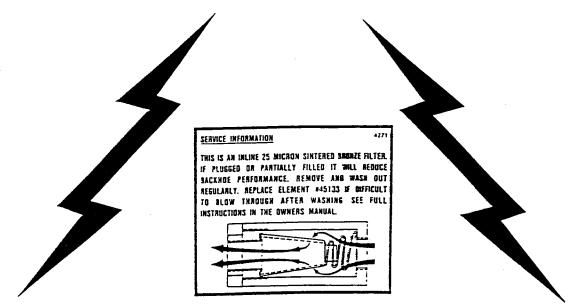

PART #40244 LIGHTNING BOLT - LEFT

PART #4271
INLINE FILTER DECAL

PART #40243 LIGHTNING BOLT - RIGHT